



ELECTRICAL COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42968T	PLATE, IGNITION	1		
2	332	7778A 3	SWITCH BOX ASSEMBLY	1		
3	10	69079	SCREW, SWITCH BOX	1		
4	10	40007110	SCREW, SWITCH BOX	2		
5	23	94304	BUSHING, SWITCH BOX SCREW	2		
6	11	45076	NUT, SWITCH BOX TERMINAL	9		
7	84	41592A 4	HARNESS ASSEMBLY, PRIMARY	1		
8	84	99215A25	CABLE, HIGH TENSION	3		
9	85	63709A 1	PROTECTOR, SPARK PLUG	3		
10	33	97182	SPARK PLUG	3		
11	10	40113 25	SCREW, IGNITION PLATE	3		
12	339	7370A13	IGNITION COIL ASSEMBLY	3		
13	11	45076	NUT, IGNITION COIL TERMINAL	6		
14		43542	COVER, IGNITION COIL	1		
15	10	40007114	SCREW, IGNITION COIL COVER	6		
16	12	89302	WASHER, COIL COVER SCREW	6		
17		62351A 1	RECTIFIER ASSEMBLY	1		
18	10	40056107	SCREW, RECTIFIER	2		
19	11	45076	NUT, RECTIFIER TERMINAL	2		
20		58124A28	MERCURY SWITCH ASSEMBLY	1		
21	10	40056107	SCREW, MERCURY SWITCH	1		
22		45315	TERMINAL BLOCK	2		
23	10	48408	SCREW, TERMINAL BLOCK	4		
24	84	41591A 3	WIRING HARNESS ASSEMBLY, E	1		
25	88	79091	FUSE (20 AMP)	1		
26	84	88439A 3	BATTERY CABLE (POSITIVE)	1		
26	84	88439A 4	BATTERY CABLE (NEGATIVE)	1		
27	89	96158	STARTER SOLENOID	1		
28	10	40007106	SCREW, STARTER SOLENOID	2		
29	12	40023 14	WASHER, STARTER SOLENOID	2		
30	84	88807A 6	WIRE, SOLENOID SCREW (BLAC	1		
31	13	26992	LOCKWASHER	2	STARTER SOLENOID TERMINA	
32	11	64015	NUT, STARTER SOLENOID TERM	2		
33	11	26419	NUT, STARTER SOLENOID TERM	2		
34	84	88808A18	WIRE, RECTIFIER TO SOLENOID	1		
35		12417T	COVER, IGNITION	1		
36	10	40007114	SCREW, IGNITION COVER	3		
37	12	89302	WASHER, IGNITION COVER SCR	3		
38		13473 1	FUSE HOLDER	1		