



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	52901	NUT, FLYWHEEL	1		
2	12	68229	WASHER, FLYWHEEL NUT	1		
3	19	45907	PLUG, FLYWHEEL PULLER THRE	1		
4	248	5977A 9	FLYWHEEL ASSEMBLY	1	UNITED STATES 5141096 AND I	
4	248	5977A24	FLYWHEEL ASSEMBLY	1	UNITED STATES 5141097 AND I	
5	10	68997	SCREW, PLATE/HUB TO FLEXI	8		
6	10	32417	SCREW, FLEXIBLE PLATE TO F	8		
7		73189	PLATE, SWITCH BOX	1		
8	25	57009	GROMMET, SWITCH BOX PLATE	3		
9	10	59645	SCREW	3	SWITCH BOX PLATE TO CYLIND	
10	12	56720	WASHER, SWITCH BOX PLATE S	3		
11	54	47483	"J" CLIP, SWITCH BOX WIRES A	1		
12	332	5772A 1	SWITCH BOX ASSEMBLY	1		
13	10	20619	SCREW, SWITCH BOX TO PLATE	4		
14	84	65999A 5	WIRE ASSEMBLY	2		
16	11	45076	NUT, SWITCH BOX TERMINAL	13		
17		58124A19	MERCURY SWITCH ASSEMBLY	1		
18	10	37571	SCREW, MERCURY SWITCH TO	1		
19	86	66986	TERMINAL BLOCK	1		
20	10	20646	SCREW, TERMINAL BLOCK TO P	1		
21	10	37655	SCREW, WIRE TO TERMINAL BL	1		
22	54	23567	CLIP, WIRES AND HARNESS	2		
23	10	48408	SCREW, CLIP TO PLATE (3/8")	2		
24		69205	"D" WAHER, CLIP SCREW	2		
28	54	47483	"J" CLAMP, TRIGGER PLATE HAF	1		
29		73395	PLATE, MOUNTING - IGNITION C	1		
30	10	28668	SCREW, MOUNTING PLATE TO C	3		
31	339	5748A 2	IGNITION COIL ASSEMBLY	4	UNITED STATES 5141096 AND I	
31	338	4995A 2	IGNITION COIL ASSEMBLY	4	UNITED STATES 5141097 AND I	
33	11	45076	NUT, IGNITION COIL TERMINAL	8		
34		73192	COVER, IGNITION COIL	1		
35	10	69046	SCREW, COVER TO MOUNTING	5		
36	12	30164	WASHER, COVER SCREW	5		
37		77672	STRAP, PRIMARY HARNESS	1		
37A	10	48408	SCREW, STRAP ATTACHING	2		
38	398	5919A 3	STATOR ASSEMBLY	1		
39	10	75840	SCREW, STATOR TO UPPER EN	4		
40		77000A 2	TRIGGER PLATE ASSEMBLY	1		
41	84	77617	HARNESS, PRIMARY (CYLINDER	1		
42	84	77618	HARNESS, PRIMARY (CYLINDER	1		
42	54	28944	CLAMP, HARNESS ATTACHING	1		