



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	4177A 3	HOUSING ASSEMBLY, DISTRIBUTOR	1	SERIAL 00000000-02991033	
1	337	4479	HOUSING, DISTRIBUTOR	1	SERIAL 03051040-03052380	
2		32197	STOP, SPARK ADVANCE-DISTRIBUTOR	1		
3	17	27962	PIN, ANCHOR SPRING-DISTRIBUTOR	1		
4	24	27944	SPRING, HORSESHOE -DISTRIBUTOR	1		
5	12	53540	WASHER, ECONOMIZER COLLAR	1		
6		30580A 1	ECONOMIZER COLLAR ASSEMBLY	1	SERIAL 00000000-02670574	
6		55804A 1	ECONOMIZER COLLAR ASSEMBLY	1	SERIAL 02783253-09999999	
7	17	27961	PIN, ECONOMIZER COLLAR-SP	1		
8	22	25094	FITTING, GREASE-ECONOMIZER	1		
9		27947	SWIVEL, LINKAGE-ECONOMIZER	1		
10		25996A 1	SWIVEL AND LINK ROD ASSEMBLY	1		
11	11	25168	NUT, UPPER LINK ROD ADJUSTING	1		
12		37588	ROD, LINK-UPPER	1		
13		27948	SWIVEL, UPPER LINK ROD TO THROTTLE	1		
14		48562	LEVER, THROTTLE CONTROL	1		
15	13	25806	WASHER, WAVE-THROTTLE CONTROL	1		
16	12	29245	WASHER, THROTTLE CONTROL	1		
17	11	20361	NUT, UPPER LINK ROD TO THROTTLE	1		
18	10	37559	SCREW, THROTTLE LEVER TO ECONOMIZER	1		
19	12	29395	WASHER, THROTTLE CONTROL	1		
20	23	45818	BUSHING, THROTTLE CONTROL	1		
21	11	20509	NUT, THROTTLE CONTROL LEVER	1		
22		37587	SWIVEL, LOWER-THROTTLE CONTROL	1		
23	11	20361	NUT, THROTTLE CABLE TO LOWER THROTTLE	1		
24		48692	COLLAR, THROTTLE ACTUATOR	1		
25	10	48675	SCREW, ADJUSTING-ACTUATOR	1	SERIAL 00000000-03148653	
25	10	61658	SCREW, ADJUSTING-ACTUATOR	1	SERIAL 03186263-09999999	
26	11	20890	NUT, THROTTLE ACTUATOR	1		
27		52023	CAP, NYLON-THROTTLE ACTUATOR	1		
28		48671	PLATE, THROTTLE ACTUATOR	1		
29	10	37892	SCREW, THROTTLE ACTUATOR	2		
30	12	20128	WASHER, THROTTLE ACTUATOR	2		
31	13	26996	LOCKWASH, THROTTLE ACTUATOR	2		
32	23	48674	SPACER, THROTTLE ACTUATOR	1		
33		54239	CAM, THROTTLE ACTUATOR PLATE	1		
34	12	46246	WASHER, ADAPTOR-DISTRIBUTOR	1		
35		48666A 1	ADAPTOR ASSEMBLY, DISTRIBUTOR	1		
36	22	25094	FITTING, GREASE-DISTRIBUTOR	1		
37	10	22040	SCREW, DISTRIBUTOR HOUSING	3		
38	12	20084	WASHER, DISTRIBUTOR HOUSING	2		