



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	3486A22	GEAR HOUSING ASSEMBLY, COI	1	A-1623-3486A22, A-1623-3486A2	
-	1623	3486A23	GEAR HOUSING ASSEMBLY, COI	1	A-1623-3486A22, A-1623-3486A2	
-	1623	3912A 4	GEAR HOUSING ASSEMBLY, COI	1	A-1623-3486A22, A-1623-3486A2	
-	1623	3912A 5	GEAR HOUSING ASSEMBLY, COI	1	A-1623-3486A22, A-1623-3486A2	
1	1623	3486A 4	GEAR HOUSING ASSEMBLY -SI	1	SERIAL 00000000-02670574	
1	1623	3912A 6	GEAR HOUSING ASSEMBLY -SI	1	SERIAL 02783253-09999999	
53		54346	CAM, SHIFT	1		
54		30625	FOLLOWER, CAM	1		
55		30624	SLIDE, CROSS PIN	1		
56	24	30622	SPRING, COMPRESSION-CAM F	1		
57	15	30923A 1	SHIM, BEARING OUTER RACE A	AR		
58	31	30894A 1	TAPERED ROLLER BEARING A	1		
59	31	30895	BEARING, ROLLER-FORWARD	1		
60	43	53982	FORWARD GEAR ASSEMBLY	1		
61	52	34239	RATCHET, SLIDING CLUTCH	1		
62	17	30632	PIN, CROSS-RATCHET TO PRO	1		
63	24	30893	SPRING, RETAINING-CROSS PI	1		
64	44	52542	SHAFT, PROPELLER	1		
65	43	53983	REVERSE GEAR ASSEMBLY	1		
66	15	29955A 1	SHIM, THRUST WASHER TO G	AR		
67	12	30633	WASHER, THRUST-BEARING C	1		
68	30	31265	BEARING, BALL-REVERSE GEA	1		
69	25	29976	"O"RING, BEARING CARRIER	1		1,2,4
70		52132A 1	BEARING CARRIER ASSEMBLY	1		
71	31	30956	BEARING, ROLLER-BEARING	1		
72	26	30550	OIL SEAL, BEARING CARRIER	2		
73	28	30281	KEY, LOCATING-BEARING CAR	1		
74	14	52700	TAB WASHER, GEAR HOUSING	1		
75		52699	COVER, GEAR HOUSING	1		
76		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
77	10	47580	SCREW, TRIM TAB TO GEAR H	1	SERIAL 00000000-02670574	
77	10	55726	SCREW, TRIM TAB TO GEAR H	1	SERIAL 02783253-09999999	
78	12	45176	WASHER, GEAR HOUSING TO	2		
79	11	34933	NUT, GEAR HOUSING TO DRIVE	2		
80	10	34535	SCREW, GEAR HOUSING TO DR	1		
81		46961A 1	THRUST HUB AND WASHER AS:	1		
82	12	29590	WASHER, CUPPED-THRUST H	1		
83	12	31211	WASHER, SPLINED-PROPELLER	1		
84	14	31210	TAB WASHER, PROPELLER NUT	1		
85	11	52707	NUT, PROPELLER	1		