



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	337	4411A 2	SWITCH BOX ASSEMBLY, COMPI	1			
2	10	60251	SCREW, HARNESS LEADS TO SV	4			
3	10	56214	SCREW, SWITCH BOX TO FRON	3			
3	10	59788	SCREW, SWITCH BOX TO FRON	1			
4	11	46887	NUT, SWITCH BOX SCREW	1			
5	332	2910A 3	RECTIFIER ASSEMBLY, COMPLE	1			
6	11	45076	NUT, RECTIFIER TERMINAL	3			
7	10	24866	SCREW, RECTIFIER TO TOP COV	2			
8	11	46887	NUT, RECTIFIER TO TOP COWL	2			
9		59757	BRACKET, RETAINER-HIGH TEN	1			
10	10	22956	SCREW, RETAINER BRACKET TO	1			
11	12	29245	WASHER, RETAINER BRACKET I	1			
12	11	46887	NUT, RETAINER BRACKET SCRE	1			
13	10	30663	SCREW, WIRING HARNESS LEA	1			
14	50	58788	STARTER MOTOR ASSEMBLY	1			
15	13	26992	LOCKWASHER, STARTER MOTO	1			
16	11	20890	NUT, STARTER MOTOR TERMIN	1			
17		59736	CABLE, STARTER SOLENOID TO	1			
18	10	20362	SCREW, STARTER MOTOR TO C	1			
18	10	31984	SCREW, STARTER MOTOR CRAI	1			
19	13	26993	LOCKWASHER, STARTER MOTO	2			
20		52691	BRACKET, SUPPORT-STARTER	1			
21	13	24669	LOCKWASHER, THRU BOLT-BRA	2			
22	11	20013	NUT, THRU BOLT-BRACKET TO	2			
23	10	24234	SCREW, STARTER MOTOR BRAI	2			
24	13	26993	LOCKWASHER, STARTER MOTO	2			
25		25596	WIRE, STARTER MOTOR TO STA	1	BLACK - 10"		
26	10	29197	SCREW, GROUND WIRE TO STA	1			
27		25661	STARTER SOLENOID	1			
28	10	53099	SCREW, STARTER SOLENOID TI	2			
29	13	26993	LOCKWASHER, SOLENOID TERN	2			
30	11	20083	NUT, SOLENOID TERMINAL-INSI	2			
31	13	26996	LOCKWASHER, SOLENOID TERN	2			
32	11	20645	NUT, SOLENOID TERMINAL (#10	2			
33		59769	BRACKET, STARTER SOLENOID	1			
34	10	37561	SCREW, SOLENOID BRACKET TI	2			
35	11	46887	NUT, SOLENOID BRACKET SCRE	2			
36		26901	BUMPER, STARTER SOLENOID	1			
37		59741	WIRING HARNESS (INTERNAL)	1			
38	54	52876	CLAMP, WIRING HARNESS TO B	1			
39	10	45962	SCREW, WIRING HARNESS CLA	2			