



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1552	3670A 3	DRIVE SHAFT HOUSING ASSEM	1	SERIAL 00000000-02670574	
1	1551	3669A 4	DRIVE SHAFT HOUSING ASSEM	1	SERIAL 00000000-02670574	
1	1552	3911A 3	DRIVE SHAFT HOUSING ASSEM	1	SERIAL 02783253-09999999	
1	1551	3918A 3	DRIVE SHAFT HOUSING ASSEM	1	SERIAL 02783253-09999999	
2	16	56295	STUD, DRIVE SHAFT HOUSING	2		
3	19	47579	PLUG, PLASTIC-TRIM TAB SCR	1	SERIAL 00000000-02670574	
3	19	32297	PLUG, PLASTIC-TRIM TAB SCR	1	SERIAL 02783253-09999999	
4	10	48409	SCREW, RETAINING STRIP TO	2		
5	10	48408	SCREW, RETAINING STRIP TO	6		
6		37417	COVER, TRIM-DRIVE SHAFT HOL	1		
7	10	37571	SCREW, TRIM COVER TO BOTTC	4	SERIAL 00000000-02786462	
7	10	57807	SCREW, TRIM COVER TO BOTTC	4	SERIAL 02881082-09999999	
	25	57806	GROMMET, TRIM COVER SCREW	4	SERIAL 02881082-09999999	
8		37919	SEAL, TRIM COVER TO DRIVE SH	1		
9		37665	STRIP, RETAINING-TRIM COVER	2		
10		38052	STRIP, RETAINING-TRIM COVER	1		
11	32	37446	TUBE, WATER INLET (SHORT SH	1		
11	32	37438	TUBE, WATER INLET (LONG SH	1		
12		38469	TUBE, EXHAUST (SHORT SHAFT)	1		
12		38470	TUBE, EXHAUST (LONG SHAFT)	1		
13	10	38601	SCREW, EXHAUST TUBE TO EX	2		
14	11	46886	NUT, EXHAUST TUBE SCREW	2		
15	11	23161	NUT, POWERHEAD STUDS (3/8-	6		
15	11	21528	NUT, POWERHEAD STUDS (5/16	2		
16	11	20509	NUT, POWERHEAD STUDS (3/8-	2		
17	12	20086	WASHER, POWERHEAD STUDS	2		
18	27	48801	GASKET, EXHAUST EXTENSION	1		1,2,3,4
19		52887	GUIDE, PUSH ROD-REVERSE LO	1		
20		47591	ROD, PUSH-REVERSE LOCK (SH	1		
20		47558	ROD, PUSH-REVERSE LOCK (LO)	1		
21	11	47661	NUT, JAM-PUSH ROD	1		
22		47559	YOKE, PUSH ROD	1		
23	17	39023	PIN, PUSH ROD TO REVERSE LC	1		
24	18	25191	COTTER PIN, PUSH ROD PIN	1		
25		37396	MOUNT -UPPER	2		
26		26218	COVER, UPPER MOUNT-OUTSID	2		
27		26217	COVER, UPPER MOUNT-INSIDE I	2	SERIAL 00000000-02670574	
27		57931	COVER, UPPER MOUNT-INSIDE I	2	SERIAL 02783253-09999999	
28		24929	PACKING, "U" CUP	2		
29	10	28773	SCREW, UPPER MOUNT COVER	4		
30	10	28775	SCREW, UPPER MOUNT COVER	4		