



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	3486A22	GEAR HOUSING ASSEMBLY, COI	1	A-1623-3486A22, A-1623-3486A2	
-	1623	3486A23	GEAR HOUSING ASSEMBLY, COI	1	A-1623-3486A22, A-1623-3486A2	
-	1623	3912A 4	GEAR HOUSING ASSEMBLY, COI	1	A-1623-3486A22, A-1623-3486A2	
-	1623	3912A 5	GEAR HOUSING ASSEMBLY, COI	1	A-1623-3486A22, A-1623-3486A2	
1	1623	3486A 4	GEAR HOUSING ASSEMBLY	1	SERIAL 00000000-02670574	
1	1623	3912A 6	GEAR HOUSING ASSEMBLY	1	SERIAL 02783253-09999999	
2		55662	SCREEN, WATER INLET (EAF	2		
3	17	21438	PIN, DOWEL	2		
4	16	57921	STUD, GEAR HOUSING TO D	1		
5	16	57920	STUD, GEAR HOUSING TO D	2		
6	16	56297	STUD, WATER PUMP BASE A	1		
7	16	57919	STUD, WATER PUMP BASE A	2		
8	31	32898	BEARING, ROLLER-DRIVE SH	1		
9	45	47433	DRIVE SHAFT (SHORT SHAFT)	1		
9	45	47434	DRIVE SHAFT (LONG SHAFT)	1		
10	43	53981	GEAR, PINION-DRIVE SHAFT	1		
11	11	35921	NUT, PINION GEAR TO DRIVE :	1		
12	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR		
13	30	20464	BEARING, BALL-DRIVE SHAFT	1		
14	53	30726	RING, RETAINING-BALL BEARI	1		
12	15	30278A 1	SHIM, WATER PUMP BASE TO	AR		
15	27	32438	GASKET, WATER PUMP BASE	1		1,2,4
16	25	30224	"O"RING, WATER PUMP BASE	1		1,2,4
17	46	48747A 1	WATER PUMP BASE ASSEMBL	1		
18	26	31489	OIL SEAL, WATER PUMP BAS	1		
19	26	31507	OIL SEAL, WATER PUMP BAS	1		
20	17	35973	DOWEL PIN, WATER PUMP E	2		
21	27	32433	GASKET, LOWER-WATER PUM	1		1,2,4
22		32435	PLATE, FACE-WATER PUMP B	1		
23	27	32434	GASKET, UPPER-FACE PLATE	1		1,2,4
24	46	48743A 1	WATER PUMP BODY ASSEMBL	1		
25		48752	INSERT, WATER PUMP BOD	1		
26	26	31507	OIL SEAL, WATER PUMP BOI	1		
27	26	38970	SEAL, RUBBER-WATER INLE	1		1,2,4
28	47	30221	IMPELLER, WATER PUMP	1		
29	17	29967	PIN, IMPELLER DRIVE	1	SERIAL 00000000-02670574	
29	28	56654	KEY, IMPELLER DRIVE	1	SERIAL 02783253-09999999	
30	10	30720	SCREW, WATER PUMP BODY	1		
31	13	26992	LOCKWASHER, WATER PUMP	1		
32	12	29245	WASHER, WATER PUMP BOD	3		
32	11	26045	NUT, WATER PUMP BODY FAC	2		