



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	4021A 4	GEAR HOUSING ASSEMBLY, CO	1	A-1623-4021A4 AND A-1623-4021	
-	1623	4021A 5	GEAR HOUSING ASSEMBLY, CO	1	A-1623-4021A4 AND A-1623-4021	
1	1623	4021A 6	GEAR HOUSING ASSEMBLY	1		
2	23	56513	SLEEVE, LUBRICATION	1		
3	17	21438	PIN, GEAR HOUSING	2		
4	16	57921	STUD, GEAR HOUSING TO D	1		
5	16	57920	STUD, GEAR HOUSING TO D	2		
6	16	56297	STUD, WATER PUMP BASE A	1		
7	16	30667	STUD, WATER PUMP BASE A	2		
8	31	32898	BEARING, ROLLER - DRIVE S	1		
9	45	59117A 1	DRIVE SHAFT ASSEMBLY (SHC	1		
9	45	59116A 1	DRIVE SHAFT ASSEMBLY (LON	1		
10	24	34576	SPRING, COMPRESSION - DF	1		
11	17	30545	PIN, COMPRESSION SPRING	1		
12	43	56518	GEAR, PINION - DRIVE SHAFT	1		
13	11	35921	NUT, PINION GEAR TO DRIVE	1		
14	15	57007A 1	SHIM, TAPERED ROLLER BEAF	AF		
15	31	33138A 1	TAPERED ROLLER BEARING A	1		
16	27	33146	GASKET, WATER PUMP BASE	1		3
17	25	33145	"O" RING, WAER PUMP BASE	1		3
18	46	58618A 1	WATER PUMP BASE ASSEMBL	1		
19	26	31489	OIL SEAL, WATER PUMP BAS	1		
20	26	55682	OIL SEAL, WATER PUMP BAS	1		
21	17	35973	DOWEL PIN, WATER PUMP E	2		
22	27	32433	GASKET, LOWER - WATER PUI	1		3
23	23	32435	PLATE, FACE - WATER PUMP	E 1		
24	27	32434	GASKET, UPPER - FACE PLATE	1		3
25	46	48743A 1	WATER PUMP BODY ASSEMBL	1		
26		48752	INSERT, WATER PUMP BODY	1		
27	26	31507	OIL SEAL, WATER PUMP BOU	1		
28	26	38970	SEAL, RUBBER - WATER INLU	1		3
29	47	30221	IMPELLER, WATER PUMP	1		
30	28	56654	KEY, IMPELLER DRIVE	1		
31	10	30720	SCREW, WATER PUMP BODY	1		
32	13	26992	LOCKWASHER, WATER PUMP	1		
33	12	29245	WASHER, WATER PUMP BODY	3		
34	11	35045	NUT, WATER PUMP BODY FAS	2		
35	12	36001	WASHER, WATER PUMP BODY	1		
37	25	30271	RING, RUBBER - CENTRIFUGAI	1		3
38	23	29804	SLEEVE, GUIDE - WATER INLE	1		
39		27641	SEAL, EXHAUST TUBE	1		2