



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	4021A 4	GEAR HOUSING ASSEMBLY, CO	1	A-1623-4021A4 AND A-1623-4021	
-	1623	4021A 5	GEAR HOUSING ASSEMBLY, CO	1	A-1623-4021A4 AND A-1623-4021	
1	1623	4021A 6	GEAR HOUSING ASSEMBLY - S	1		
53		54346	CAM, SHIFT	1		
54		30625	FOLLOWER, CAM	1		
55		30624	SLIDE, CROSS PIN	1		
56	24	30622	SPRING, COMPRESSION - CAM	1		
57	15	30923A 1	SHIM, BEARING OUTER RACE	AR		
58	31	30894A 1	TAPERED ROLLER BEARING A	1		
59	31	30895	BEARING, ROLLER - FORWARD	1		
60	43	56517	FORWARD GLIDING ASSEMBLY	1		
61	52	34239	RATCHET, SLIDING CLUTCH	1		
62	17	30632	PIN, CROSS - RATCHET TO PR	1		
63	24	30893	SPRING, RETAINING - CROSS F	1		
64	44	52542	SHAFT, PROPELLER	1		
65	43	56516	REVERSE GEAR ASSEMBLY	1		
66	15	29955A 1	SHIM, THRUST WASHER TO G	AR		
67	12	30633	WASHER, THRUST - BEARING	1		
68	30	31265	BEARING, BALL - REVERSE GE	1		
69	25	29976	"O" RING, BEARING CARRIER	1		3
70		52132A 1	BEARING CARRIER ASSEMBLY	1		
71	31	30956	BEARING, ROLLER - BEARING	1		
72	26	30550	OIL SEAL, BEARING CARRIER	2		
73	28	30281	KEY, LOCATING - BEARING C	1		
74	14	52700	TAB WASHER, GEAR HOUSING	1		
75		52699	COVER, GEAR HOUSING	1		
76		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
77	10	55726	SCREW, TRIM TAB TO GEAR H	1		
78	12	45176	WASHER, GEAR HOUSING TO	2		
79	11	34933	NUT, GEAR HOUSING TO DRIVE	2		
80	10	34353	SCREW, GEAR HOUSING TO DR	1		
81		46961A 1	THRUST HUB AND WASHER AS:	1		
82	12	29590	WASHER, CUPPED - THRUST	1		
83	12	31211	WASHER, SPLINED - PROPELLER	1		
84	14	31210	TAB WASHER, PROPELLER NUT	1		
85	11	52707	NUT, PROPELLER	1		