



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	2986A 8	SWITCH BOX ASSEMBLY, COMPI	1		
2	12	45075	WASHER, SWITCH BOX TERMIN	7		
3	11	45076	NUT, SWITCH BOX TERMINAL	7		
4	10	24866	SCREW, SWITCH BOX TO FRON	4	SERIAL 00000000-02670574	
4	10	21625	SCREW, SWITCH BOX TO FRON	4	SERIAL 02783253-09999999	
5	11	46887	NUT, SWITCH BOX TO FRONT SI	4		
6	332	2910A 3	RECTIFIER ASSEMBLY, COMPLETE	1		
7	12	45075	WASHER, RECTIFIER TERMINAL	3		
8	11	45076	NUT, RECTIFIER TERMINAL	3		
9	10	24963	SCREW, RECTIFIER TO BOTTOM	2		
10	13	22773	LOCKWASHER, RECTIFIER MOU	2		
11		59757	BRACKET, RETAINER-HIGH TEN	1		
12	10	31294	SCREW, RETAINER BRACKET TO	1	SERIAL 00000000-02670574	
12	10	22956	SCREW, RETAINER BRACKET TO	1	SERIAL 02783253-09999999	
13	12	29245	WASHER, RETAINER BRACKET I	1		
14	11	46887	NUT, RETAINER BRACKET SCRE	1		
15	50	45822A 1	STARTER MOTOR ASSEMBLY	1	FOR BREAKDOWN, SEE ACCES	
15	50	57867A 1	STARTER MOTOR ASSEMBLY	1	FOR BREAKDOWN, SEE ACCES	
15	50	58788	STARTER MOTOR ASSEMBLY (S	1	FOR BREAKDOWN, SEE ACCES	
16	13	26992	LOCKWASHER, STARTER MOTO	1		
17	11	20890	NUT, STARTER MOTOR TERMIN	1		
18	10	20362	SCREW, STARTER MOTOR TO C	1		
18	10	31984	SCREW, STARTER MOTOR TO C	1		
19	13	26993	LOCKWASHER, STARTER MOTO	2		
20		52691	BRACKET, SUPPORT-STARTER I	1		
21	13	24669	LOCKWASHER, THRU BOLT-BRA	2		
22	11	20013	NUT, THRU BOLT-BRACKET TO :	2		
23	10	24234	SCREW, STARTER MOTOR BRAI	2		
24	13	26993	LOCKWASHER, STARTER MOTO	2		
25		25596	WIRE, STARTER MOTOR TO STA	1		
26	10	29197	SCREW, GROUND WIRE TO STA	1		
27		25661	STARTER SOLENOID	1		
28	10	21625	SCREW, STARTER SOLENOID TI	2		
29	13	26992	LOCKWASHER, STARTER SOLEI	2		
30	13	26993	LOCKWASHER, SOLENOID TERN	2		
31	11	20083	NUT, SOLENOID TERMINAL-INSI	2		
32	13	26996	LOCKWASHER, SOLENOID TERN	2		
33	11	20645	NUT, SOLENOID TERMINAL (#10	2		
34		52902	CABLE, STARTER SOLENOID TO	1		
35		52771	WIRING HARNESS (INTERNAL)	1		
36	54	52876	CLAMP, WIRING HARNESS TO R	1		