



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1440	7374A 4	CLAMP BRACKET ASSEMBLY	2		
2	10	78492A 1	THUMB SCREW ASSEMBLY	2		
3	10	78495	SCREW, THUMB SCREW	2		
4	12	78493	WASHER, THUMB SCREW	2		
5		75043	COVER, THUMB SCREW	2		
6		74528	TILT TUBE	1		
7	13	89634	WASHER, TILT TUBE	2		
8	11	56041	NUT, TILT TUBE	2		
9		53078	CAP, PLASTIC - TILT TUBE	2		
10	23	59624	SPACER, CLAMP BRACKET STUD	1		
11	16	59625	STUD	1	CLAMP BRACKET - NOT USED V	
12	12	36001	WASHER, CLAMP BRACKET STU	1		
13	13	26993	LOCKWASHER, CLAMP BRACKET	2		
14	11	28770	NUT, CLAMP BRACKET STUD	2		
15	17	49930A 1	TILT PIN ASSY - NOT USED WIT	1		
16	10	68298	BOLT, CLAMP BRACKET TO TRA	2		
17	12	68410	WASHER, CLAMP BRACKET BOL	2		
18	10	68299	BOLT, CLAMP BRACKET TO TRA	2		
19	12	68300	WASHER, CLAMP BRACKET BOL	2		
20	11	99405	NUT, CLAMP BRACKET BOLT	4		
21	55	28416	PIN, UPPER SHOCK MOUNTING	1		
22		76386	TILT LOCK ASSEMBLY, STARBO	1		
23		76385	TILT LOCK ASSEMBLY, PORT	1		
24	25	62702	"O" RING, TILT LOCK	2		2
25	12	76388	WASHER, TILT LOCK	2		
26	26	22734	OIL SEAL, SWIVEL BRACKET (TIL	2		
27		79659	COUPLING, TILT LOCK	1		
28	18	47959	COTTER PIN, TILT LOCK COUPLI	2		
29		87431	REVERSE LOCK ASSY	2	NOT USED WUTH POWER TRIM	
30	24	78203A 1	SPRING ASSEMBLY	1	NOT USED WUTH POWER TRIM	
31		92405A 1	REVERSE LOCK ASSY	1	NOT USED WUTH POWER TRIM	
32	24	78203A 2	SPRING ASSEMBLY	1	NOT USED WUTH POWER TRIM	
33		56349	SHAFT, REVERSE LOCK PIVOT	1	NOT USED WUTH POWER TRIM	
34	23	69132	BUSHING, PIVOT SHAFT	2	NOT USED WUTH POWER TRIM	
35	18	45882	COTTER PIN, LOCK TO SHAFT	1	NOT USED WUTH POWER TRIM	
36	55	65447	PIN, LOWER SHOCK MOUNTING	2		
37	55	58780A 3	SHOCK ABSORBER NOT USED V	2	NOT USED WUTH POWER TRIM	
38	23	73203	SPACER, UPPER SHOCK BUSHIN	2	NOT USED WUTH POWER TRIM	
39	12	28196	WASHER, UPPER BUSHING RET	2	NOT USED WUTH POWER TRIM	
40	23	32171	BUSHING, RUBBER - SHOCK ABS	4	NOT USED WUTH POWER TRIM	
41	23	28198	BUSHING, RUBBER - SHOCK ABS	4	NOT USED WUTH POWER TRIM	