



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
1	1440	7374A 4	CLAMP BRACKET ASSEMBLY	2			
2	10	78492A 1	THUMB SCREW ASSEMBLY	2			
3	10	78495	SCREW, THUMB SCREW	2			
4	12	78493	WASHER, THUMB SCREW	2			
5		75043	COVER, THUMB SCREW	2			
6		74528	TILT TUBE	1			
7	13	89634	WASHER, TILT TUBE	2			
8	11	56041	NUT, TILT TUBE	2			
9		53078	CAP, PLASTIC - TILT TUBE	2			
10	23	59624	SPACER, CLAMP BRACKET STUD	1			
11	16	59625	STUD	1	CLAMP BRACKET - NOT USED V		
12	12	36001	WASHER, CLAMP BRACKET STU	1			
13	13	26993	LOCKWASHER, CLAMP BRACKET	2			
14	11	28770	NUT, CLAMP BRACKET STUD	2			
15	17	49930A 1	TILT PIN ASSY - NOT USED WIT	1			
16	10	68298	BOLT, CLAMP BRACKET TO TRA	2			
17	12	68410	WASHER, CLAMP BRACKET BOL	2			
16	10	68299	BOLT, CLAMP BRACKET TO TRA	2			
17	12	68300	WASHER, CLAMP BRACKET BOL	2			
18	11	99405	NUT, CLAMP BRACKET BOLT	4			
19	55	28416	PIN, UPPER SHOCK MOUNTING	1			
20		76386	TILT LOCK ASSEMBLY, STARBO	1			
21		76385	TILT LOCK ASSEMBLY, PORT	1			
22	25	62702	"O" RING, TILT LOCK	2		2	
23	12	76388	WASHER, TILT LOCK	2			
24	26	22734	OIL SEAL, SWIVEL BRACKET (TIL	2			
25		79659	COUPLING, TILT LOCK	1			
26	18	47959	COTTER PIN, TILT LOCK COUPLI	2			
27		87431	REVERSE LOCK ASSY	2	NOT USED WUTH POWER TRIM		
28	24	78203A 1	SPRING ASSEMBLY	1	NOT USED WUTH POWER TRIM		
27		92405A 1	REVERSE LOCK ASSY	1	NOT USED WUTH POWER TRIM		
28	24	78203A 2	SPRING ASSEMBLY	1	NOT USED WUTH POWER TRIM		
29		56349	SHAFT, REVERSE LOCK PIVOT	1	NOT USED WUTH POWER TRIM		
30	23	69132	BUSHING, PIVOT SHAFT	2	NOT USED WUTH POWER TRIM		
31	18	45882	COTTER PIN, LOCK TO SHAFT	1	NOT USED WUTH POWER TRIM		
32	55	65447	PIN, LOWER SHOCK MOUNTING	2			
33	55	58780A 3	SHOCK ABSORBER NOT USED V	2	NOT USED WUTH POWER TRIM		
34	23	73203	SPACER, UPPER SHOCK BUSHIN	2	NOT USED WUTH POWER TRIM		
35	12	28196	WASHER, UPPER BUSHING RET	2	NOT USED WUTH POWER TRIM		
36	23	32171	BUSHING, RUBBER - SHOCK ABS	4	NOT USED WUTH POWER TRIM		
37	22	28198	BUSHING, RUBBER - SHOCK ABS	4	NOT USED WUTH POWER TRIM		