



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1575	5240A	DRIVE SHAFT HOUSING ASSEM	1		
1	1573	5239A	DRIVE SHAFT HOUSING ASSEM	1		
2	16	56295	STUD	2	DRIVE SHAFT HOUSING TO GE	
3	19	64649	PLUG, PLASTIC-TRIM TAB SCR	1		
5	10	57807	SCREW, TRIM COVER TO BOTTC	4		
6	25	57806	GROMMET, TRIM COVER SCREW	4		
7		46933A	GROUND STRAP ASSEMBLY, TR	2		
8	10	62568	SCREW, GROUND STRAP ATTACH	2		
9	32	62864	TUBE, WATER INLET (SHORT SH	1		
9	32	60897	TUBE, WATER INLET (LONG SH	1		
10		65370	TUBE, EXHAUST (SHORT SHAFT)	1		
10		78184	TUBE, EXHAUST (LONG SHAFT)	1		
11		65638	BOOT, EXHAUST TUBE	2		
12		25887	GUIDE, PUSH ROD-REVERSE LO	1		
13		47591	ROD, PUSH-REVERSE LOCK (SH	1		
13		47558	ROD, PUSH-REVERSE LOCK (LOI	1		
14	11	47661	NUT, JAM-PUSH ROD	1		
15		47559	YOKE, PUSH ROD	1		
16	17	39023	PIN, PUSH ROD TO REVERSE LC	1		
17	18	25191	COTTER PIN, PUSH ROD PIN	1		
18		75297	MOUNT, RUBBER-UPPER (SHOR	2		
18		75296	MOUNT, RUBBER-UPPER (LONG	1		
19	12	47840	WASHER, RUBBER-UPPER MOU	2		
20	12	31263	WASHER, UPPER MOUNT BOLT	2		
21	11	34933	NUT, UPPER MOUNT BOLT	2		
22		75300	MOUNT, RUBBER-LOWER (SHOF	2		
22		75298	MOUNT, RUBBER-LOWER (LONG	2		
23	10	49318	SCREW, UPPER MOUNT (5 1/2")	2		
24		66336	MOUNT, RUBBER-LOWER (SHOF	1		
25	11	25096	NUT, MOUNT SCREW	2		
26		25067	BUMPER, RUBBER-MOUNTIN SC	2		
27	11	34933	NUT	2	GEAR HOUSING AND DRIVE SH	
28	12	45176	WASHER	2	GEAR HOUSING TO DRIVE SHA	
29	11	29489	NUT	1	GEAR HOUSING AND DRIVE SH	
30	12	45176	WASHER	1	GEAR HOUSING TO DRIVE SHA	
31		35608	CLAMP	2	LOWER MOUNT TO DROVE SH	
32	24	35522	SPRING, TENSION-LOWER MOU	4		
33	10	29256	SCREW	4	LOWER MOUNT CLAMP TO DRI	
34		35474	COVER, LOWER MOUNT CLAMP	2		
35	11	35521	NUT, LOWER MOUNT CLAMP CC	2		
36	10	28722	SCREW, COVER TO LOWER CLA	2		