



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66096A	1 PLATE ASSEMBLY, EXHAUST EX	1		
2	23	27132	BUSHING, NYLON - EXHAUSE	1		
3	17	23784	DOWEL PIN, EXHAUST EXTEN	2		
4		37918	SEAL, EXHAUST EXTENSION F	1		
5		38032	STRIP, RETAINING - EXHAUST	1		
6	10	37571	SCREW	5	SEAL AND RETAINING STRIP TI	
7	27	69238	GASKET	1	POWERHEAD TO EXHAUST EX	5
8	10	66023	SCREW, ADAPTOR PLATE TO HO	2		
9	10	66023	SCREW	7	HOUSING PLATE TO DRIVE SH	
10	11	69254	NUT	2	CRANKCASE STUDS TO EXHAU	
11	12	25970	WASHER	2	CRANKCASE STUDS TO EXHAU	
12	27	66102	GASKET, PLATE TO DRIVE SHAF	1		5
13	26	60898	SEAL, DRIVE SHAFT HOUSING P	1		
14		74257A	3 PLATE ASSEMBLY, DRIVE SHAF	1		
15	26	38970	SEAL, RUBBER	1	WATER INLET TUBE (DRIVE SH	5
16	17	23784	DOWEL PIN, DRIVE SHAFT HOU	2		
17	27	69860	GASKET	1	DRIVE SHAFT HOUSING PLATE	5
18		74199	EXHAUST TUBE	1		
19	10	61010	SCREW	4	EXHAUST TUBE TO DRIVE SHA	
20	13	26992	LOCKWASHER, EXHAUST TUBE	4		
21	12	25970	WASHER, POWERHEAD STUDS	6		
22	11	34932	NUT, POWERHEAD STUDS	6		
--	27	73645A	76 GASKET SET			