



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		73434A	FUEL PUMP ASSEMBLY	1		
2	21	30430A	CHECK VALVE ASSEMBLY	1		
3		55278A	DIAPHRAGM ASSEMBLY	1		5
4			GASKET, CHECK VALVE	2		5
5			GASKET, FUEL PUMP	2		5
6		23004	RETAINER, CHECK VALVE	1		
7	10	20037	SCREW, CHECK VALVE TO FUE	2		
8	35	73532	FUEL FILTER	1		5
9	25	47386	"O" RING, COVER TO FUEL PU	1		5
10		77885	COVER, FUEL PUMP	1		
11	10	37370	SCREW, COVER TO FUEL PUM	1		
12	27	25848	GASKET, COVER SCREW	1		5
13	10	70939	SCREW	1	FUEL PUMP TO UPPER TRANSF	
13	10	27281	SCREW	2	FUEL PUMP TO UPPER TRANSF	
14	22	64705	FITTING, FUEL PUMP (OUTLET	1		
15	32	63146	FUEL LINE, TEE TO FUEL PUMP	1		
16	22	73318	TEE, FUEL LINE	1		
17	32	63146	FUEL LINE	2	CARBURETOR TO TEE TO CARI	
18	54	68424	CLAMP, FUEL LINE ATTACHING	8		
19	32	70432	FUEL LINE, ADAPTOR TO FUEL F	1		
20	22	63187	FITTING, FUEL LINE TO ADAPTO	1		
21		22833	ADAPTOR, CHECK UNIT (FUEL LI	1		
22		23069	STEM, CHECK UNIT ADAPTOR	1		
23	25	20415	"O" RING, ADAPTOR STEM	1		5
24	24	23067	SPRING, ADAPTOR STEM	1		
25		30188	CUP WASHER, ADAPTOR	1		
26	10	69029	SCREW, ADAPTOR TO BOTTOM	2		
27	11	36069	NUT, ADAPTOR SCREW	2		
--	27	73645A76	GASKET SET			