



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	162	6053A37	GEAR HOUSING ASSY, COMPLE	1	THE ENCLOSED GEAR HOUSIN	
-	1623	6053A23	GEAR HOUSING ASSY, COMPLE	1	THE ENCLOSED GEAR HOUSIN	
-	1655	7333A27	GEAR HOUSING ASSY, COMPLE	1	THE ENCLOSED GEAR HOUSIN	
-	1655	7333A25	GEAR HOUSING ASSY, COMPLE	1	THE ENCLOSED GEAR HOUSIN	
1	1623	6053A 5	GEAR HOUSING ASSEMBLY	1	UNITED STATES 5141096 AND I	
1	1655	7333A23	GEAR HOUSING ASSEMBLY	1	UNITED STATES 5141097 AND I	
1A	22	85822A 1	CONNECTOR ASSEMBLY, SP	1	UNITED STATES 5141097 AND I	
2	17	46912	DOWEL PIN, GEAR HOUSING	2		
3	16	57921	STUD	1	GEAR HOUSING TO DRIVE SHA	
4	16	57920	STUD	2	GEAR HOUSING TO DRIVE SHA	
5	16	56297	STUD	1	WATER PUMP BASE AND BODY	
6	16	30667	STUD	2	WATER PUMP BASE AND BODY	
7	31	32898	BEARING, ROLLER-DRIVE SH	1		
8	45	69250	DRIVE SHAFT (SHORT SHAFT)	1		
8	45	69251	DRIVE SHAFT (LONG SHAFT)	1		
9	43	75316	GEAR, PINION-DRIVE SHAFT	1		
10	11	35921	NUT, PINION GEAR TO DRIVE	1		
11	23	70412	SPACER, ROLLER BEARING TC	1		
11	15	57007A 1	SHIM, ROLLER BEARING TO W	AR		6
12	31	69220	ROLLER BEARING, DRIVE SHA	1		
14	27	33146	GASKET, WATER PUMP BASE	1		5
15	25	33145	"O" RING, WATER PUMP BASE	1		5
16	46	73804A 1	WATER PUMP BASE ASSEMBL	1		
17	26	31489	OIL SEAL, WATER PUMP BASE	1		
18	26	79884	OIL SEAL, WATER PUMP BASE	1		
19	17	35973	DOWEL PIN	2	WATER PUMP BASE TO WATER	
20	27	32433	GASKET	1	LOWER-WATER PUMP BASE TO	5
21		32432	PLATE	1	FACE-WATER PUMP BASE TO \	
22	27	32434	GASKET	1	UPPER-FACE PLATE TO WATER	5
23	46	64141A 1	WATER PUMP BODY ASSEMBL	1		
24		48752	INSERT, WATER PUMP BODY	1		
26	26	38970	SEAL, RUBBER-WATER INLE	1		5
27	47	65960	IMPELLER, WATER PUMP	1		
28	28	56654	KEY, IMPELLER DRIVE	1		
29	10	30720	SCREW	1	WATER PUMP BODY TO GEAR	
30	13	26992	LOCKWASHER, WATER PUMP	1		
31	12	29245	WASHER	3	WATER PUMP BODY FASTENIN	
32	11	35888	NUT, WATER PUMP FASTENIN	2		
33	12	36001	WASHER, WATER PUMP BODY	1		
34	11	35814	NUT, WATER PUMP BODY FAS	1		
35	25	20271	RING	1	RUBBER-CENTRIFUGAL SLINGE	