



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2158	7638	COWL, BOTTOM	1		
2		74303	COVER, AIR INLET	1		
3	10	62568	SCREW, COVER TO BOTTOM CO	4		
3A	12	30164	WASHER, COVER SCREW	4		
4	27	73646	GASKET, BOTTOM COWL	1		2
5		39616	BOOT, CONTROL CABLES - BOT	1		
6		37637	BOOT, FUEL CONNECTOR - BOT	1		
10	32	34395A	HOSE	1	TELL TALE - EXHAUST COVER	
11		52889	NOZZLE, TELL TALE HOSE TO B	1		
12	10	48408	SCREW	1	TELL TALE NOZZLE TO BOTTO	
13	22	78279	ELBOW, TELL TALE HOSE TO CY	1		
14		60304A55	SHIFT SHAFT ASSEMBLY, UPPEF	1		
14		60304A54	SHIFT SHAFT ASSEMBLY, UPPEF	1		
16	23	26856	BUSHING, SHIFT SHAFT	1		
17		73402	SHIFT LINK	1		
18	12	35462	WASHER, LINK ROD (SHIFT LEV)	2		
19	11	36069	NUT, LINK ROD	2		
20	13	29720	WASHER, WAVE - LINK ROD	1		
21	24	20099	SPRING, LINK ROD TO GUIDE BL	1		
22		37896	GUIDE BLOCK, LINK ROD	1		
23		52732	BRACKET, ANCHOR - CONTROL	1		
24		39519	CAP, BARREL RETAINER - ANCH	1		
25		39618	LEVER, NYLON - SHIFT CABLE LI	1		
26	17	47175	PIN, LOCKING LEVER AND COVE	3		
27		39667	COVER, NYLON - SHIFT CABLE	1		
28		65799	LINK, LOCKING LEVER TO COVE	1		
29	10	24234	SCREW	3	ANCHOR BRACKET TO CYLINDE	
30		52100	WEAR PLATE, LINK ROD	1		
31		38279	LATCH	1	CONTROL CABLE FASTENING -	
-	27	73645A32	GASKET SET			