



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		98517A 2	PLATE ASSEMBLY, EXHAUST EX	1		
2	23	27132	BUSHING, NYLON - EXHAUST EX	1		
3	17	23784	DOWEL PIN, EXHAUST EXTEN	2		
4		37918	SEAL, EXHAUST EXTENSION F	1		
5		99358	STRIP, RETAINING - EXHAUST	1		
6	10	37571	SCREW	5	SEAL AND RETAINING STRIP TI	
7	27	69238	GASKET, POWERHEAD	1		2
8	10	66023	SCREW, ADAPTOR PLATE TO HO	2		
9	10	66023	SCREW	7	HOUSING PLATE TO DRIVE SHA	
10	11	69254	NUT, CRANKCASE STUDS	2		
11	12	25970	WASHER, CRANKCASE STUDS	2		
12	27	66102	GASKET, DRIVE SHAFT HOUSINI	1		2
13	26	60898	SEAL, DRIVE SHAFT HOUSING P	1		
14		98518A 4	PLATE ASSEMBLY, DRIVE SHAF	1		
15	26	38970	SEAL, RUBBER - WATER INLET	1		2
16	17	23784	DOWEL PIN, DRIVE SHAFT HOU!	2		
17	27	69860	GASKET, EXHAUST TUBE	1		2
18		74199	EXHAUST TUBE	1		
19	10	65414	SCREW	4	EXHAUST TUBE TO DRIVE SHA	
20	13	26992	LOCKWASHER, EXHAUST TUBE	4		
21	12	25970	WASHER, POWERHEAD STUDS	6		
22	11	34932	NUT, POWERHEAD STUDS	6		
-	27	73645A32	GASKET SET			