

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		73434A	FUEL PUMP ASSEMBLY	1	
2	21	30430A	CHECK VALVE ASSEMBLY	1	
3		55278A	DIAPHRAGM ASSEMBLY	1	2
4			GASKET, CHECK VALVE	2	2
5			GASKET, FUEL PUMP	2	2
6		23004	RETAINER, CHECK VALVE	1	
7	10	20037	SCREW, CHECK VALVE TO FUE	2	
8	35	73532	FUEL FILTER	1	2
9	25	35480	"O" RING, COVER TO FUEL PU	1	2
10		94321	COVER, FUEL PUMP	1	
11	10	37370	SCREW, COVER TO FUEL PUM	1	
12	27	25848	GASKET, COVER SCREW	1	2
13	10	70939	SCREW	1	FUEL PUMP TO UPPER TRANSF
13	10	69067	SCREW	2	FUEL PUMP TO UPPER TRANSF
14	22	64705	FITTING, FUEL PUMP (OUTLET	1	
15	32	31583109	FUEL LINE, TEE TO FUEL PUMP	1	
16	22	73318	TEE, FUEL LINE	1	
17	32	31583109	FUEL LINE	2	CARBURETOR TO TEE TO CARI
18	54	68424	CLAMP, FUEL LINE ATTACHING	8	
19	32	31583109	FUEL LINE, ADAPTOR TO FUEL F	1	
20	22	63187	FITTING, FUEL LINE TO ADAPTO	1	
21		22833	ADAPTOR, CHECK UNIT (FUEL LI	1	IDENTIFIED BY 73419 CASTING
22		23069	STEM, CHECK UNIT ADAPTOR	1	IDENTIFIED BY 73419 CASTING
23	25	20415	"O" RING, ADAPTOR STEM	1	IDENTIFIED BY 73419 CASTING 2
24	24	23067	SPRING, ADAPTOR STEM	1	IDENTIFIED BY 73419 CASTING
21		30186	ADAPTOR, CHECK UNIT (FUEL LI	1	IDENTIFIED BY 30186 CASTING
22		30187	STEM, CHECK UNIT ADAPTOR	1	IDENTIFIED BY 30186 CASTING
23	25	20415	"O" RING, ADAPTOR STEM	1	IDENTIFIED BY 30186 CASTING 2
24	24	31089	SPRING, ADAPTOR STEM	1	IDENTIFIED BY 30186 CASTING
25		30188	CUP WASHER, ADAPTOR	1	
26	10	36154	SCREW, ADAPTOR TO BOTTOM	2	
27	11	36069	NUT, ADAPTOR SCREW	2	
--	27	73645A32	GASKET SET		

