



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	833	1919A 2	CYLINDER BLOCK AND CRANKC	1	833-1919A2 CYLINDER BLOCK A	
1	833	1919A 2	CYLINDER BLOCK AND CRANKC	.1	833-1919A2 CYLINDER BLOCK A	
1	833	1919A 2	CYLINDER BLOCK AND CRANKC	.1	833-1919A2 CYLINDER BLOCK A	
2	17	20032	PIN, DOWEL-CYLINDER BLOCK	3,3		
3	23	26348	BUSHING, CRANKCASE-COWL	2,2		
4	16	21831	STUD, CARBURETOR MOUNTI	6,6		
5	17	20033	PIN, DOWEL-CRANKCASE TO C	2,2		
6	16	64281	STUD, CRANKCASE TO DRIVE	2,2		
7	16	26135	STUD, CYLINDER BLOCK TO D	4,4		
8	16	26134	STUD, CYLINDER BLOCK TO D	2,2		
9	22	32802	PLUG, PIPE-CYLINDER BLOCK	1,1		
10	10	29877	SCREW, CRANKCASE TO CYLINC	3,3		
10	10	26132	SCREW, CRANKCASE TO CYLINC	2,2		
11	10	69091	SCREW, CRANKCASE TO CYLINC	2,2		
11	10	78841	SCREW, CRANKCASE TO CYLINC	19,19		
12	11	29250	NUT, CRANKCASE FASTENING S	26,26		
13		26551	BRACKET, CLAMP EXTENSION	1,1		
14	10	20089	SCREW, MAIN BEARING LOCKIN	2,2		
15	10	20359	SCREW, CENTER MAIN BEARINC	2,2		
16	14	20091	TAB WASHER, BEARING LOCKIN	5,5		
17	1125	1675A 1	END CAP ASSEMBLY, UPPER	1,1		
18	26	41953	OIL SEAL	1,1		
19	25	20081	"O" RING	1,1		
20	30	63742	BEARING, BALL	1,1		
21	15	20082A 1	SHIM, END CAP TO CRANKCASE	AR,AR		
22	10	69034	SCREW, END CAP MOUNTING	4,4		
23	1126	1751A 1	END CAP ASSEMBLY, LOWER	1,1		
24	26	41953	OIL SEAL, UPPER	1,1		
25	26	29478	OIL SEAL, LOWER	1,1		
26	25	20081	"O" RING	1,1		
27	30	63742	BEARING, BALL	1,1		
28	21	28481A 1	CHECK VALVE ASSEMBLY, ENC	1,1		
29	15	20085A 1	SHIM, END CAP TO CRANKCASE	AR,AR		
30	10	69034	SCREW, END CAP MOUNTING	3,3		
31	27	30013	GASKET, CYLINDER BLOCK TO M	1,1		
32		30066	PLATE, EXHAUST MANIFOLD	1,1		
33	27	30012	GASKET, MANIFOLD PLATE TO C	1,1		
34		29888	COVER, EXHAUST MANIFOLD	1,		
34		31303	COVER, EXHAUST MANIFOLD	.1		
35	10	28667	CREW, MANIFOLD COVER MOUN	23,23		
36	54	26519	CLAMP, SPARK PLUG LEADS TO	3,3		
37		20109	GROUND STRAP ASSEMBLY, CY	1,1		