



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1		
2	112	26617	WASHER, FLYWHEEL NUT	1,1		
3	28	30250	KEY, FLYWHEEL DRIVE	1,1		
4	213	1683A 2	FLYWHEEL ASSEMBLY	1,1		
5		29788	FLANGE, FLYWHEEL PULLEY	1,1		
6		30306	PULLEY, FLYWHEEL	1,1		
7	17	26618	PIN, DOWEL - PULLEY TO FLYWHEEL	1,1		
8		29787	HUB, FLYWHEEL PULLEY	1,1		
9	398	1697	STATOR, ALTERNATOR	1,1		
10		30050	TERMINAL, STATOR LEAD W/FLYWHEEL	2,2		
11	10	29283	SCREW, STATOR TO UPPER ENCASEMENT	4,4		
12	54	26550	CLIP, STATOR LEAD TO EXHAUSE	1,1		
13		22789	"D" WASHER, CLIP FASTENING	1,1		
14	10	30009	SCREW, STATOR LEAD CLIP FASTENING	1,1		
15	54	22783	"S" CLIP, STATOR LEAD TO BOTTOM	3,3		