



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30263A 2	FUEL PUMP ASSEMBLY - UPPER	1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2		
3	21	30430	VALVE, CHECK - FUEL PUMP	2,2		
4		23004	RETAINER, CHECK VALVE	1,1		
5	10	20037	SCREW, RETAINER TO HOUSII	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1		
8		23009A 1	FUEL PUMP ASSEMBLY - LOWEF	1,		
8		30461A 2	FUEL PUMP ASSEMBLY - LOWEF	,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2		
3	21	30430	VALVE, CHECK - FUEL PUMP	2,2		
4		23004	RETAINER, CHECK VALVE	1,1		
5	10	20037	SCREW, RETAINER TO HOUSIN	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1		
9		30275	COVER, FUEL PUMP (LOWER) - (I	1,		
9		30275	COVER, FUEL PUMP (LOWER) - (I	,1		
9		29044	COVER, FUEL PUMP (UPPER)	1,		
10	27	30276	GASKET, FUEL PUMP COVER	2,2		
11	10	29878	SCREW, FUEL PUMP MOUNTING	2,2		
12	10	30274	SCREW, FUEL PUMP MOUNTING	2,2		
12	10	30273	SCREW, FUEL PUMP MOUNTING	2,2		
13	32	30233	FUEL LINE, UPPER FUEL PUMP (I	,1		
13	32	30233	FUEL LINE, LOWER FUEL PUMP	,1		
--	32	30467	FUEL LINE, UPPER FUEL PUMP (I	,1		
14	22	30174	ELBOW, UPPER FUEL PUMP OU	1,		
--	22	30468	CONNECTOR, UPPER AND LOWI	,2		
15	22	30175	SLEEVE, FUEL PUMP OUTLET EI	1,		
15	22	30175	SLEEVE, FUEL PUMP OUTLET EI	,2		
16	22	30177	NUT, FUEL PUMP OUTLET ELBO	1,		
16	22	30177	NUT, FUEL PUMP OUTLET ELBO	,2		
17	32	30231	FUEL LINE, LOWER PUMP OUTL	1,		
17	32	30466	FUEL LINE, LOWER PUMP OUTL	,1		
18	22	30174	ELBOW, LOWER FUEL PUMP INL	1,1		
19	22	30175	SLEEVE, LOWER FUEL PUMP INI	1,1		
20	22	30177	NUT, LOWER FUEL PUMP INLET	1,1		
21	32	30176	FUEL LINE, ADAPTOR TO LOWE	1,1		
22		30186	ADAPTOR, CHECK UNIT (FUEL LI	1,1		
23		30187	STEM, CHECK UNIT ADAPTOR	1,1		
24	25	20415	"O" RING, ADAPTOR STEM	1,1		
25	24	20189	SPRING, ADAPTOR STEM	1,1		