



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30585	BRACKET, STOP	1,1		
2	10	24228	SCREW, STOP BRACKET ADJUST	3,3		
3	11	20890	NUT, STOP BRACKET ADJUSTIN	3,3		
4		26852	CAP, NYLON - ADJUSTING SCRE	3,3		
5	10	28636	SCREW, STOP BRACKET TO DIS	2,2		
6	12	20533	WASHER, STOP BRACKET FAST	2,2		
7		27947	SWIVEL, LINKAGE - ECONOMIZE	1,1		
8		25996A 1	SWIVEL AND LINK ROD ASSEMB	1,1		
9		27949	ROD, LINK - UPPER	1,1		
10	11	25168	NUT, UPPER LINK ROD ADJUSTI	1,1		
11		27948	SWIVEL, UPPER AND LOWER LI	3,3		
12		30582	LEVER, LINKAGE - UPPER	1,1		
13		30619	LEVER, LINKAGE - LOWER	1,1		
14		30623	ROD, LINK - LOWER	1,1		
15		30629	SHAFT, VERTICAL	1,1		
16	23	26954	BUSHING, NYLON - VERTICAL SH	2,2		
17	17	25319	ROLL PIN, VERTICAL SHAFT AN	3,3		
18	12	29245	WASHER, UPPER AND LOWER S	3,3		
19	11	20361	NUT, UPPER AND LOWER SWIV	3,3		
20	10	25781	SCREW, SET - LINKAGE LEVER	2,2		
21	12	20553	WASHER, VERTICAL SHAFT - CE	1,1		
22	393	1282A17	DISTRIBUTOR ASSEMBLY, COMF	1,1		
23	33	30578	SPARK PLUG (J4J)	6,6		
24	54	24836	CLIP, DISTRIBUTOR PRIMARY G	1,1		
25		22789	"D" WASHER, GROUND LEAD CI	1,1		
26	10	69014	SCREW, DISTRIBUTOR GROUND	1,1		
27		32193A 2	COIL, IGNITION	2,2		
28	13	20554	LOCKWASHER, IGNITION COIL T	4,4		
29	13	26996	LOCKWASHER, IGNITION COIL T	4,4		
30	11	68219	NUT, IGNITION COIL TERMINALS	4,4		
31	25	26543	"O" RING, IGNITION COIL	2,2		
32		28922	JUMPER, COIL TO COIL	1,1		
33		26514	BRACKET, COIL FASTENING	1,1		
34		26512	BAND, COIL BRACKET	1,1		
35	10	26889	SCREW, COIL BAND TO BRACKE	1,1		
36	11	20184	NUT, COIL BAND SCREW	1,1		
37	10	20784	SCREW, COIL BRACKET TO BOT	1,1		
38	10	26889	SCREW, COIL BRACKET TO BOT	1,1		
39	11	20184	NUT, COIL BRACKET SCREW	2,2		
40	16	20077	STUD, COIL BRACKET TO SUPP	1,1		
41		20228	SUPPORT, EXTERNAL WIRING L	1,1		