



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	22339	NUT, FLYWHEEL	1,1		
2	12	26617	WASHER, FLYWHEEL NUT	1,1		
3	28	45554	KEY, FLYWHEEL DRIVE	1,1		
4	213	1683A 4	FLYWHEEL ASSEMBLY	1,1		
5		29788	FLANGE, FLYWHEEL PULLEY	1,1		
6		30306	PULLEY, FLYWHEEL	1,1		
7	17	26618	PIN, DOWEL - PULLEY TO FLYW	1,1		
8		29787	HUB, FLYWHEEL PULLEY	1,1		
9	50	30745	RATCHET, FLYWHEEL	1,1		
10	10	29238	SCREW, RATCHET TO FLYWHEEL	3,3	WHERE NO LOCKWASHER IS IN	
11	398	2035	STATOR, ALTERNATOR	1,1		
12		30050	TERMINAL, STATOR LEAD W/INS	2,2		
13	10	29283	SCREW, STATOR TO UPPER EN	4,4		
14	54	24836	CLIP, STATOR LEAD TO EXHAUS	1,1		
15		22789	"D" WASHER, CLIP FASTENING	1,1		
16	10	69014	SCREW, STATOR LEAD CLIP FA	1,1		
17	54	22783	"S" CLIP, STATOR LEAD TO BOT	3,3		