



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30269A 2	FUEL PUMP ASSEMBLY-UPPER	1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2		
3	21	30430	VALVE, CHECK-FUEL PUMP	2,2		
4		23004	RETAINER, CHECK VALVE	1,1		
5	10	43725	SCREW, RETAINER TO HOUSII	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1		
8		30461A 2	FUEL PUMP ASSEMBLY-LOWER	1,1		
2	27	23005	GASKET, CHECK VALVE TO HO	2,2		
3	21	30430	VALVE, CHECK-FUEL PUMP	2,2		
4		23004	RETAINER, CHECK VALVE	1,1		
5	10	43725	SCREW, RETAINER TO HOUSIN	2,2		
6	27	24863	GASKET, FUEL PUMP	2,2		
7		23014	DIAPHRAGM, FUEL PUMP	1,1		
9		30275	COVER, FUEL PUMP	2,2		
10	27	30276	GASKET, FUEL PUMP COVER	2,2		
11	10	29878	SCREW, FUEL PUMP MOUNTING	2,2		
12	10	30274	SCREW, FUEL PUMP MOUNTING	2,2		
13	10	30273	SCREW, FUEL PUMP MOUNTING	2,2		
14	32	30467	FUEL LINE, UPPER FUEL PUMP C	1,1		
15	22	30468	CONNECTOR, UPPER FUEL PUM	1,1		
16	22	30175	SLEEVE, FUEL PUMP OUTLET CI	1,1		
17	22	30177	NUT, FUEL PUMP OUTLET CONN	1,1		
18	32	17008	FUEL LINE, LOWER PUMP OUTL	1,1		
19	32	30233	FUEL LINE, LOWER FUEL PUMP	1,1		
20	22	30468	CONNECTOR, LOWER FUEL PUN	1,1		
21	22	30175	SLEEVE, FUEL PUMP OUTLET CI	1,1		
22	22	30177	NUT, FUEL PUMP OUTLET CONN	1,1		
23	32	30176	FUEL LINE, ADAPTOR TO LOWE	1,1		
24	22	30174	ELBOW, LOWER FUEL PUMP INL	1,1		
25	22	30175	SLEEVE, FUEL PUMP INLET ELB	1,1		
26	22	30177	NUT, FUEL PUMP INLET ELBOW	1,1		
27		30186	ADAPTOR, CHECK UNIT (FUEL LI	1,1		
28		30187	STEM, CHECK UNIT ADAPTOR	1,1		
29	25	20415	"O" RING, ADAPTOR STEM	1,1		
30	24	30189	SPRING, ADAPTOR STEM	1,1		
31		30188	CUP WASHER, ADAPTOR	1,1		
32	10	56500	SCREW, ADAPTOR TO BOTTOM	2,2		
33	11	20184	NUT, ADAPTOR FASTENING SCF	2,2		
34	32	30230	FUEL LINE, UPPER TO CENTER	2,2		
35	32	26955	FUEL LINE, CENTER AND LOWER PARI	2,2		