



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30472	WIRING HARNESS, INTERNAL	1,1		
2		30050	TERMINAL, HARNESS AND M	AR,AR		
3	24	28975	SPRING, GARTER-INTERNAL V	1,1		
4		26079A 2	PLATE, WIRING HARNESS TO	1,1		
5	10	45893	SCREW, HARNESS PLATE FAS	4,4		
6	54	22783	"S" CLIP, RECTIFIER HARNESS	2,2		
7		32177A 2	RECTIFIER ASSEMBLY	1,1		
8	13	26993	LOCKWASHER, RECTIFIER M	1,1		
9	11	21929	NUT, RECTIFIER MOUNTING	1,1		
10	32	28052	SLEEVE, RUBBER- RECTIFIER	1,1		
11	32	28373	SLEEVE, RUBBER-RECTIFIER	2,2		
12	10	35400	SCREW, HARNESS AND STATI	3,3		
13	11	29488	NUT, HARNESS AND STATOR	3,3		
14	50	30575	STARTER MOTOR ASSEMBLY	1,	THE 50-30575 STARTER MOTO	
14A	50	30842	STARTER MOTOR ASSEMBLY	1,1		
15		31057	PLATE, SPACER-STARTER MO	1,1	USE ONLY WITH 50-30842 STAF	
--		21098	BUMPER, RUBBER-STARTER M	1,	USE ONLY WITH 50-30842 STAF	
--	12	31364	WASHER, RUBBER-STARTER I	1,	USE ONLY WITH 50-30842 STAF	
16	10	22698	SCREW, STARTER MOTOR TO	2,2		
17	13	26993	LOCKWASHER, STARTER MOT	2,2		
18		38747	BRACKET, SUPPORT-STARTER	1,1		
19	12	24664	WASHER, THRU BOLT-BRACK	1,1		
20	13	26992	LOCKWASHER, THRU BOLT-BF	2,2		
21	11	20890	NUT, THRU BOLT-BRACKET TC	2,2		
22		25596	CABLE, WIRE-STARTER TO STA	1,1		
23	54	20534	CLAMP, LOWER CABLE-START	1,1		
24	10	69035	SCREW, WIRING HARNESS GF	1,1		
25		32268	SOLENOID, STARTER	1,1		
26	13	26993	LOCKWASHER, SOLENOID TEF	2,2		
27	11	22053	NUT, SOLENOID TERMINAL (5/	2,2		
28	13	26996	LOCKWASHER, SOLENOID TEF	2,2		
29	11	68219	NUT, SOLENOID TERMINAL(#1	2,2		
30	10	29238	SCREW< SOLENOID TO STAR	2,2		
31	54	22627	CLAMP, WIRING HARNESS TO	1,1		
32		22789	"D" WASHER, HARNESS CLAM	1,1		
33	10	26548	SCREW, HARNESS CLAMP FAS	1,1		
34		29714	BLOCK, TERMINAL-UPPER FUE	1,1		
35	10	22245	SCREW, TERMINAL BLOCK FAS	2,2		
36	13	26996	LOCKWASHER, TERMINAL BLC	2,2		
37	12	26014	WASHER, TERMINAL BLOCK F	2,2		
38	292	1572	RESISTOR	2,2		