



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	53	26406	RING, SNAP - BALL BEARING RE	1,1		
2	30	26379	BEARING, BALL - DRIVE SHAFT	1,1		
3	45	29864A 1	DRIVE SHAFT ASSEMBLY - DISTI	1,1		
4	24	28469	SPRING, DISTRIBUTOR DRIVE	1,1		
5		29874A 1	PILOT ASSEMBLY	1,1		
6	30	20066	BEARING, BALL - DISTRIBUTOR	1,1		
7	24	29275	SPRING, HORSESHOE	1,1		
8	17	27962	PIN, SPRING TERMINAL	1,1		
9	12	29245	WASHER, SPRING TERMINAL PI	1,1		
10	43	29892A 1	SECTOR GEAR AND PIN ASSEM	1,1		
11	17	27961	PIN, SPRING RETAINER	1,1		
12	22	23612	FITTING, GREASE - SECTOR GI	1,1		
13		29558A 1	THROTTLE ACTUATOR ASSEMBL	1,1		
14	23	26602	BUSHING, NYLON - THROTTLE	1,1		
15	10	20100	SCREW, THROTTLE ACTUATOR	2,2		
16	12	20128	WASHER, THROTTLE ACTUATOR	2,2		
17	13	26996	LOCKWASHER, THROTTLE ACTI	2,2		
18		30404	ADAPTOR, DISTRIBUTOR	1,1		
19	22	25094	FITTING, GREASE - ADAPTOR	1,1		
20	10	22040	SCREW, ADAPTOR AND PILOT T	3,3		
21	12	20084	WASHER, ADAPTOR AND PILOT	3,3		
22	11	20083	NUT, ADAPTOR AND PILOT FAST	3,3		
23	12	27939	WASHER, THRUST - DISTRIBUT	1,1		
24	14	27960	TAB WASHER, CAP LOCKING	1,1		
25	13	27959	WASHER, WAVE - TAB WASHER	1,1		
26		27955	CAP, ADAPTOR AND PILOT FAST	1,1		
27	10	20542	SCREW, ADAPTOR AND PILOT T	4,4		
28	13	26992	LOCKWASHER, ADAPTOR AND F	4,4		
29	23	29909	SPACER, DRIVEN PULLEY	1,1		
30		29906A 1	DRIVEN PULLEY ASSEMBLY	1,1		
31	17	29908	PIN, DRIVEN PULLEY	1,1		
32		29907	FLANGE, DRIVEN PULLEY	1,1		
33	28	29910	KEY, MAGNETO DRIVING	1,1		
34	10	29911	SCREW, PULLEY CLAMPING	1,1		
35	13	26996	LOCKWASHER, PULLEY CLAMPPI	1,1		
36		20140	BELT, TIMING	1,1		
37		30109	GROUND STRAP ASSEMBLY, AD	1,1		