



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1620	1748A 2	GEAR HOUSING ASSEMBLY, CO	1,1	
-	1620	1748A 3	GEAR HOUSING ASSEMBLY, CO	1,1	
1	1620	1748A 1	GEAR HOUSING ASSEMBLY	1,1	
2	31	20231	BEARING, ROLLER - PROPEL	1,1	
3	31	29982	BEARING, ROLLER - DRIVE S	1,1	
4	16	29078	STUD, GEAR HOUSING TO D	2,2	
5	16	29079	STUD, GEAR HOUSING TO D	1,1	
6	16	29589	STUD, WATER PUMP BASE A	2,2	
7	16	29974	STUD, WATER PUMP BASE A	2,2	
7	16	29975	STUD, WATER PUMP BASE A	1,1	
8	45	30234	DRIVE SHAFT (STANDARD)	1,1	
8	45	30220	DRIVE SHAFT (LONG)	1,1	
9	43	29961	GEAR, PINION - DRIVE SHAFT	1,1	
10	12	22025	WASHER, PINION GEAR TO RE	1,1	
11	11	20220	NUT, PINION GEAR RETAINING	1,1	
12	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR	
13	30	20464	BEARING, BALL - DRIVE SHAFT	1,1	
14	53	30262	RING, RETAINING - BALL BEAR	1,1	
15	25	26855	"O" RING, WATER PUMP BASE	1,1	
16	46	30214A 1	WATER PUMP BASE ASSEMBL	1,1	
17	26	26226	OIL SEAL, WATER PUMP BAS	1,1	
18	17	29596	PIN, DOWEL - WATER PUMP	2,2	
19	27	30216	GASKET, LOWER - WATER PUI	1,1	
20		30215	PLATE, FACE - WATER PUMP E	1,1	
21	27	30933	GASKET, UPPER - FACE PLATE	1,1	
22	46	30931A 1	WATER PUMP BODY ASSEMBL	1,1	
23		30915	INSERT, WATER PUMP BOD	1,1	
24	26	20465	OIL SEAL, WATER PUMP BOC	1,1	
25	47	30221	IMPELLER, WATER PUMP	1,1	
26	17	29967	PIN, IMPELLER DRIVE	1,1	
-	25	20273	RING, RUBBER - WATER INLET	1,1	
27	22	26220A 1	WATER VALVE AND ADAPTOR	2,2	
28	21	26491	VALVE, WATER	2,2	
29	54	26492	CLAMP, WATER VALVE TO AI	2,2	
30	15	21158A 1	SHIM, VALVE ADAPTOR TO W	AR,AR	
31	13	26993	LOCKWASHER, WATER PUMP	3,3	
32	11	28770	NUT, WATER PUMP BODY STL	3,3	
33	13	26992	LOCKWASHER, WATER PUMP	2,2	
34	11	21869	NUT, WATER PUMP BODY STL	2,2	
35	25	30271	RING, RUBBER - CENTRIFUGAL	1,1	
36	26	29677	SEAL, RUBBER - WATER PUMP	1,1	