



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		29999	WIRING HARNESS, INTERNAL	1,1		
2		30050	TERMINAL, HARNESS AND ME	AR,AR		
3	24	28975	SPRING, GARTER - INTERNAL W	1,1		
4		26079	PLATE, WIRING HARNESS TO BI	1,1		
5	10	26128	SCREW, HARNESS PLATE FASTI	4,4		
6	54	22783	"S" CLIP, RECTIFIER HARNESS L	2,2		
7		29691	RECTIFIER ASSEMBLY	1,1		
8	13	26993	LOCKWASHER, RECTIFIER MO	1,1		
9	11	21929	NUT, RECTIFIER MOUNTING S	1,1		
10	32	28052	SLEEVE, RUBBER - RECTIFIER H	1,1		
11	32	28373	SLEEVE, RUBBER - RECTIFIER S	2,2		
12	10	29852	SCREW, HARNESS AND STATOF	3,3		
13	11	29488	NUT, HARNESS AND STATOR LE	3,3		
14	50	30418	STARTER MOTOR ASSEMBLY	1,1		
15	15	29876A1	SHIM, STARTER MOTOR TO CR/	AR,AR		
16	10	22698	SCREW, STARTER MOTOR TO C	2,2		
17	13	26993	LOCKWASHER, STARTER MOTO	2,2		
18		29930	BRACKET, SUPPORT - STARTER	1,1		
19	12	24664	WASHER, THRU BOLT - BRACKE	1,1		
20	13	26992	LOCKWASHER, THRU BOLT - BR	2,2		
21	11	20890	NUT, THRU BOLT - BRACKET	2,2		
22		26511	CABLE, WIRE - STARTER TO UPI	1,1		
23		25596	CABLE, WIRE - STARTER TO LOV	1,1		
24	54	20534	CLAMP, LOWER CABLE - STARTE	1,1		
25		30070	JUMPER, SOLENOID TO SOLENC	1,1		
26	10	29197	SCREW, WIRING HARNESS GRC	1,1		
27		31478	SOLENOID, STARTER	2,2		
28		28922	JUMPER, LEAD - SOLENOID TO S	1,1		
29	13	26993	LOCKWASHER, SOLENOID TERM	4,4		
30	11	20083	NUT, SOLENOID TERMINAL (5/1)	4,4		
31	13	26996	LOCKWASHER, SOLENOID TERM	3,3		
32	11	20645	NUT, SOLENOID TERMINAL (#10	4,4		
33	10	29238	SCREW, SOLENOID TO STARTE	4,4		
34	54	23567	CLAMP, WIRING HARNESS TO S	1,1		
35		22789	"D" WASHER, HARNESS CLAMP	1,1		
36	10	26548	SCREW, HARNESS CLAMP FAST	2,2		
37		29714	BLOCK, TERMINAL - UPPER FUE	1,1		
38	10	22245	SCREW, TERMINAL BLOCK FAST	2,2		
39	13	26996	LOCKWASHER, TERMINAL BLOC	2,2		
40	12	26014	WASHER, TERMINAL BLOCK FAC	2,2		
41	292	1572	RESISTOR	2,2		