



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	30	20066	BALL BEARING< DISTRIBUTOR H	1	
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1	
3	23	53539	SLEEVE, ROTOR SHAFT	1	
4	332	4177A 3	HOUSING ASSEMBLY, DISTRIBU	1	
5		53417	GROUND STRAP ASSEMBLY, DI	1	
6	10	62568	SCREW, GROUND STRAP ATTAC	1	
7		58807A 1	FLAME ARRESTOR ASSEMBLY, I	1	
8	15	21148A 1	SHIM, ROTOR	1	
9	15	55853	SHIM, ROTOR	AR	
10	23	53538	SPACER, ROTOR SHAFT	1	
11	393	3236	DISC, ROTOR	1	
12	30	26379	BALL BEARING, DISTRIBUTOR H	1	
13	53	26406	RING, RETAINING - BALL BEARIN	1	
14	393	4371	ROTOR, DISTRIBUTOR	1	
15	54	60768	CLAMP, DISTRIBUTOR CAP TO C	1	
16	10	65774	SCREW, DISTRIBUTOR CAP CLA	1	
17	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1	
18	393	3294A 1	CABLE ASSEMBLY, CAP TO COIL	1	UNITED STATES 3865694 AND I
18	84	66056A 1	CABLE ASSEMBLY, CAP TO COIL	1	UNITED STATES 3865695 AND I
19	25	26547	GROMMET, CABLE (5/16")	1	
19	25	56474	GROMMET, CABLE (7/8")	1	
20	332	2854	BOOT, CABLE TO COIL	1	
21		60096	SLEEVE, CABLE	1	
22	32	46398	SLEEVE, (LEADS 1, 2, 3, 4) - 3/4"	1	
23	27	55896	GASKET, DISTRIBUTOR CAP TO	1	2,3,4
24	393	3726A10	DISTRIBUTOR CAP ASSEMBLY	1	
25	393	1293A 1	BRUSH AND SPRING ASSEMBLY	1	
26		58807A 1	FLAME ARRESTOR ASSEMBLY	1	
27		63319	RETAINER, LEADS	4	
28	10	46378	SCREW, LEAD RETAINER (1")	2	
29	11	20013	NUT, RETAINER SCREW	2	
30	33	59599	SPARK PLUG (CHAMP L-77V)	4	
31	84	63212A 2	SPARK PLUG LEAD ASSEMBLY ‡	4	ORDER A-36549A1 KIT FOR REF
32		47604A 1	PROTECTOR, SPARK PLUG LEA	4	
33	32	26527	SLEEVE, SPARK PLUG LEAD (LE	2	
34		60096	SLEEVE, SPARK PLUG LEAD TO	4	