



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		64165A	1 PLATE ASSEMBLY, EXHAUST EX	1	UNITED STATES 3865694 AND I	
1		66096A	1 PLATE ASSEMBLY, EXHAUST EX	1	UNITED STATES 3865695 AND I	
2	23	27132	1 BUSHING, NYLON - EXHAUST EX	1	UNITED STATES 3865695 AND I	
3	17	23784	2 DOWEL PIN, EXHAUST EXTENSI	2		
4		37918	1 SEAL, EXHAUST EXTENSION PL	1		
5		38032	1 STRIP, RETAINING - EXHAUST E	1		
6	10	37571	5 SCREW, SEAL AND RETAINING	5		
7	27	66101	1 GASKET, POWERHEAD TO EXHA	1		2
7	27	69238	1 GASKET, POWERHEAD TO EXHA	1		3,4
8	10	62644	1 SCREW, ADAPTOR PLATE ATTA	1	UNITED STATES 3865694 AND I	
9	13	26993	1 LOCKWASHER, ADAPTOR PLATE	1	UNITED STATES 3865694 AND I	
8	10	66023	2 SCREW, ADAPTOR PLATE TO HO	2	UNITED STATES 3865695 AND I	
10	10	66023	7 SCREW, HOUSING PLATE TO DR	7	UNITED STATES 3865695 AND I	
11	11	69254	2 NUT, CRANKCASE STUDS TO EX	2		
12	12	25970	2 WASHER, CRANKCASE STUDS T	2		
13	27	60945	1 GASKET, PLATE TO DRIVE SHAF	1	UNITED STATES 3865694 AND I	2
13	27	66102	1 GASKET, PLATE TO DRIVE SHAF	1	UNITED STATES 3865695 AND I	3,4
14	12	34437	7 WASHER, DRIVE SHAFT HOUSIN	7	UNITED STATES 3865694 AND I	
15	11	64809	7 NUT, DRIVE SHAFT HOUSING S1	7	UNITED STATES 3865694 AND I	
16	26	60898	1 SEAL, DRIVE SHAFT HOUSING P	1		
17		64103A	3 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 3865694 AND I	
17		66100A	1 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 3865695 AND I	
18	26	38970	1 SEAL, RUBBER - WATER INLET	1		2,3,4
19	17	23784	2 DOWEL PIN, DRIVE SHAFT HOU	2		
20	27	69860	1 GASKET, DRIVE SHAFT HOUSIN	1		2,3,4
21		65032	1 EXHAUST TUBE	1		
22	10	61010	4 SCREW, EXHAUST TUBE TO DR	4		
23	13	26992	4 LOCKWASHER, EXHAUST PLATE	4		
24	12	25970	8 WASHER, POWERHEAD STUDS	8		
25	11	34932	6 NUT, POWERHEAD STUDS	6		