



| Parts List | | | | | | |
|------------|-------|--------|------------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 66096A | 1 PLATE ASSEMBLY, EXHAUST EX | 1 | | |
| 2 | 23 | 27132 | BUSHING, NYLON - EXHASUT E | 1 | | |
| 3 | 17 | 23784 | DOWEL PIN, EXHAUST EXTEN | 2 | | |
| 4 | | 37918 | SEAL, EXHAUST EXTENSION F | 1 | | |
| 5 | | 38032 | STRIP, RETAINING - EXHAUST | 1 | | |
| 6 | 10 | 37571 | SCREW, SEAL AND RETAINING | 5 | | |
| 7 | 27 | 69238 | GASKET, POWERHEAD TO EXHA | 1 | | 4 |
| 8 | 10 | 66023 | SCREW, ADAPTOR PLATE TO HO | 2 | | |
| 9 | 10 | 66023 | SCREW, HOUSING PLATE TO DF | 7 | | |
| 10 | 11 | 69254 | NUT, CRANKCASE STUDS TO EX | 2 | | |
| 11 | 12 | 25970 | WASHER, CRANKCASE STUDS T | 2 | | |
| 12 | 27 | 66102 | GASKET, PLATE TO DRIVE SHAF | 1 | | 4 |
| 13 | 26 | 60898 | SEAL, DRIVE SHAFT HOUSING P | 1 | | |
| 14 | | 74257A | 3 PLATE ASSEMBLY, DRIVE SHAF | 1 | | |
| 15 | 26 | 38970 | SEAL, RUBBER - WATER INLET | 1 | | 4 |
| 16 | 17 | 23784 | DOWEL PIN, DRIVE SHAFT HOU | 2 | | |
| 17 | 27 | 69860 | GASKET, DRIVE SHAFT HOUSINI | 1 | | 4 |
| 18 | | 74199 | EXHAUST TUBE | 1 | | |
| 19 | 10 | 61010 | SCREW, EXHAUST TUBE TO DR | 4 | | |
| 20 | 13 | 26992 | LOCKWASHER, EXHAUST TUBE | 4 | | |
| 21 | 12 | 25970 | WASHER, POWERHEAD STUDS | 6 | | |
| 22 | 11 | 34932 | NUT, POWERHEAD STUDS | 6 | | |