



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	66015	STARTER MOTOR	1		
2		56703	COLLAR, RUBBER - STARTER MI	2		
3	23	56774	SPACER, COLLAR TO BRACKET	1		
4		57247	STOP, RUBBER - STARTER MOT	2		
5	84	66053A 1	WIRE ASSY, STARTER MOTORE	1		
6	13	26992	LOCKWASHER, STARTER MOTO	1		
7	11	64015	NUT, STARTER MOTOR TERMIN	1		
8	10	69035	SCREW, WIRING HARNESS TO E	1		
9		62351A 1	RECTIFIER ASSEMBLY	1		
10	10	37656	SCREW, RECTIFIER TO PLATE (E	2		
11	12	30164	WASHER, RECTIFIER SCREW	2		
12	13	26996	LOCKWASHER, RECTIFIER TERM	3		
13	11	45076	NUT, RECTIFIER TERMINAL	3		
14	89	68258	STARTER SOLENOID	1		
15	13	26996	LOCKWASHER, SOLENOID TERM	2		
16	11	68219	NUT, SOLENOID TERMINAL (#10	2		
17	13	26993	LOCKWASHER, SOLENOID TERM	2		
18	11	68292	NUT, SOLENOID TERMINAL (5/11	2		
19		46265	BOOT, TERMINAL - STARTER SC	1		
20	10	38601	SCREW, SOLENOID TO BOTTOM	2		
21	13	26992	WASHER, SOLENOID SCREW	2		
22	84	73369	WIRING HARNESS (INTERNAL)	1		
23	24	28975	SPRING, GARTER - INTERNAL W	1		
24	54	76368	CLAMP, WIRING HARNESS	1		
25	10	69020	SCREW, WIRING HARNESS CLAI	2		
26	12	30164	WASHER, WIRING HARNESS CL	2		