



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	440	4979A 2	CRANKSHAFT ASSEMBLY	1	
2	30	32117	BEARING, BALL - UPPER	1	
3	30	63742	BEARING, BALL - LOWER	1	
4		54196A 6	CARRIER ASSEMBLY	1	
5		65800	PACKING, CARRIER	1	4
6	540	5266A 5	MAIN BEARING ASSEMBLY (VAL)	2	
7	17	20032	DOWEL PIN, MAIN BEARING	4	
8	10	45775	SCREW, MAIN BEARING CLAMP	4	
9	11	45774	NUT, MAIN BEARING CLAMPIN	4	
10	34	56007A 1	REED SET, MATCHED - MAIN B	2	
11	34	56008	REED STOP, MAIN BEARING R	8	
12	10	62204	SCREW, REED STOP MOUNTIN	20	
13	11	53153	NUT, REED STOP MOUNTING	20	
14	535	5397A 4	CENTER MAIN BEARING ASSEMBLY	1	
15	17	20032	DOWEL PIN, CENTER MAIN BE	2	
16	29	52168	BEARING, NEEDLE	56	
17		26113	RACE, OUTER (PAIR)	1	
18	53	26933	RING, SNAP - OUTER RACE C	1	
19	10	22968	SCREW, CENTER MAIN BEARIN	2	
20	11	46887	NUT, MAIN BEARING CLAMPIN	2	
21	17	47246	DOWEL PIN, (STEPPED)	1	
22	745	5219A 2	PISTON AND PISTON PIN ASSEM	4	
23	40	52035	LOCK RING, PISTON PIN	8	
24	39	45155A12	RING, PISTON	1	
25	622	4850A 3	CONNECTING ROD AND CAP AS:	4	
26	10	54803	SCREW, CAP TO CONNECTING	8	
27	11	49091	NUT, CONNECTING ROD SCRE	8	
28	31	62596A 1	BEARING ASSEMBLY, CRANKP	4	
29	29	47270	BEARING, NEEDLE - PISTON PI	116	
30	12	47247	WASHER, NEEDLE LOCATING	8	