



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66096A	1 PLATE ASSEMBLY, EXHAUST EX	1		
2	23	27132	BUSHING, NYLON - EXHASUT E	1		
3	17	23784	DOWEL PIN, EXHAUST EXTEN	2		
4		37918	SEAL, EXHAUST EXTENSION F	1		
5		38032	STRIP, RETAINING - EXHAUST	1		
6	10	37571	SCREW, SEAL AND RETAINING	5		
7	27	69238	GASKET, POWERHEAD TO EXH/	1		4
8	10	66023	SCREW, ADAPTOR PLATE TO HI	2		
9	10	66023	SCREW, HOUSING PLATE TO DF	7		
10	11	69254	NUT, CRANKCASE STUDS TO EX	2		
11	12	25970	WASHER, CRANKCASE STUDS T	2		
12	27	66102	GASKET, PLATE TO DRIVE SHAF	1		4
13	26	60898	SEAL, DRIVE SHAFT HOUSING P	1		
14		74257A	3 PLATE ASSEMBLY, DRIVE SHAF	1		
15	26	38970	SEAL, RUBBER - WATER INLET	1		4
16	17	23784	DOWEL PIN, DRIVE SHAFT HOU	2		
17	27	69860	GASKET, DRIVE SHAFT HOUSINI	1		4
18		74199	EXHAUST TUBE	1		
19	10	61010	SCREW, EXHAUST TUBE TO DR	4		
20	13	26992	LOCKWASHER, EXHAUST TUBE	4		
21	12	25970	WASHER, POWERHEAD STUDS	6		
22	11	34932	NUT, POWERHEAD STUDS	6		