



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2158	5938	COWL, BOTTOM	1		
2		74303	COVER, AIR INLET	1		
3	10	62568	SCREW, COVER TO BOTTOM CO	4		
3A	12	30164	WASHER, COVER SCREW	4		
4	27	73646	GASKET, BOTTOM COWL	1		4
5		39616	BOOT, CONTROL CABLES - BOT	1		
6		37637	BOOT, FUEL CONNECTOR - BOT	1		
7		37445	SUPPORT, WIRING HARNESS - E	1		
8	10	69029	SCREW, SUPPORT TO COWL (1	2		
9	11	36069	NUT, WIRING HARNESS SUPPO	2		
10	32	34395A	HOSE, TELL TALE - EXH. COVER	1		
11		52889	NOZZLE, TELL TALE HOSE TO B	1		
12	10	48408	SCREW, TELL TALE NOZZLE TO	1		
13	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
14		60304A33	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4366802 THRL	
14		60304A34	SHIFT SHAFT ASSEMBLY, UPPEF	1		
15		55692	COUPLING, SHIFT SHAFT)	1	UNITED STATES 4366802 THRL	
16	23	26856	BUSHING, SHIFT SHAFT)	1	UNITED STATES 4366802 THRL	
14		60304A45	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4590512 AND I	
14		60304A44	SHIFT SHAFT ASSEMBLY, UPPEF	1		
16	23	26856	BUSHING, SHIFT SHAFT	1	UNITED STATES 4590512 AND I	
17		73402	SHIFT LINK	1		
18	12	35462	WASHER, LINK ROD (SHIFT LEV)	2		
19	11	36069	NUT, LINK ROD	2		
20	13	29720	WASHER, WAVE - LINK ROD	1		
21	24	20099	SPRING, LINK ROD TO GUIDE BL	1		
22		37896	GUIDE BLOCK, LINK ROD	1		
23		52732	BRACKET, ANCHOR - CONTROL	1		
24		39519	CAP, BARREL RETAINER - ANCH	1		
25		39618	LEVER, NYLON - SHIFT CABLE LI	1		
26	17	47175	PIN, LOCKING LEVER AND COVE	3		
27		39667	COVER, NYLON - SHIFT CABLE	1		
28		65799	LINK, LOCKING LEVER TO COVE	1		
29	10	24234	SCREW, ANCHOR BRACKET TO	3		
30		52100	WEAR PLATE, LINK ROD	1		
31		38279	LATCH, CONTROL CABLE FASTE	1		