



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	6048A 7	GEAR HOUSING ASSEMBLY, CO	1		
-	1623	6053A13	GEAR HOUSING ASSEMBLY, CO	1		
1	1623	6048A 3	GEAR HOUSING ASSEMBLY (M	1		
1	1623	6053A 5	GEAR HOUSING ASSEMBLY (M	1		
51		54346	CAM, SHIFT	1		
52		30625	FOLLOWER, CAM	1		
53		30624	SLIDE, CROSS PIN	1		
54	24	30622	SPRING, COMPRESSION - CAM	1		
55	15	30923A 1	SHIM, BEARING OUTER RACE	AR		
56	31	30894A 1	TAPERED ROLLER BEARING A	1		
57	31	30895	BEARING, ROLLER - FORWARD	1		
58	43	75314	FORWARD GEAR ASSEMBLY	1		
59	52	34239	RATCHET, SLIDING CLUTCH	1		
60	17	30632	PIN, CROSS - RATCHET TO PR	1		
61	24	30893	SPRING, RETAINING - CROSS	1		
62	44	52542	SHAFT, PROPELLER	1		
63	43	75315	REVERSE GEAR ASSEMBLY	1		
65	12	71143A 1	WASHER, THRUST - BEARING C	1		
66	30	31265	BEARING, BALL - REVERSE GE	1		
67	25	29976	"O" RING, BEARING CARRIER	1		4
68		73800A 1	BEARING CARRIER ASSEMBLY	1		
68		52132A 1	BEARING CARRIER ASSEMBLY	1		
69	31	30956	BEARING, ROLLER - BEARIN	1		
70	26	76868	OIL SEAL, BEARING CARRIER	2		
--	25	32546	"O" RING, BEARING CARRIER	1		4
71	28	30281	KEY, LOCATING - BEARING CA	1		
72	14	52700	TAB WASHER, GEAR HOUSING	1		
73		52699	COVER, GEAR HOUSING	1		
74		31640A 1	TRIM TAB, GEAR HOUSING	1		
75	10	66024	SCREW, TRIM TAB TO GEAR H	1		
76	12	45176	WASHER, GEAR HOUSING TO D	2		
77	11	34933	NUT, GEAR HOUSING TO DRIVE	2		
78	10	65210	SCREW, GEAR HOUSING TO DR	1		
79		65091	THRUST HUB	1		
81	12	31211	WASHER, SPLINED - PROPELLER	1		
82	14	31210	TAB WASHER, PROPELLER NUT	1		
83	11	52707	NUT, PROPELLER	1		