



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	2986A22	SWITCH BOX ASSEMBLY, COMPI	1		
2	11	45076	NUT, SWITCH BOX TERMINAL	7		
3	10	64279	SCREW, SWITCH BOX TO FRON	4		
4	11	46887	NUT, SWITCH BOX TO FRONT SI	4		
5		62351A 1	RECTIFIER ASSEMBLY, COMPLE	1		
6	11	45076	NUT, RECTIFIER TERMINAL	3		
7	10	30405	SCREW, RECTIFIER TO FRONT	2		
8	12	30164	WASHER, RECTIFIER MOUNTING	2		
9	11	46438	NUT, RECTIFIER MOUNTING SCF	2		
10		59757	BRACKET, RETAINER - HIGH TE	1		
11	10	28636	SCREW, RETAINER BRACKET TO	1		
12	12	29245	WASHER, RETAINER BRACKET I	1		
13	50	67341	STARTER MOTOR ASSEMBLY	1	(FOR BREAKDOWN, SEE ACCES	
14	11	64015	NUT, STARTER MOTOR TERMIN	1		
15	13	26392	LOCKWASHER, STARTER MOTO	1		
16	10	20362	SCREW, STARTER MOTOR TO C	1		
16	10	31984	SCREW, STARTER MOTOR TO C	1		
17	13	26393	LOCKWASHER, STARTER MOTO	2		
18		67331	BRACKET, SUPPORT - STARTER	1		
19	13	26392	LOCKWASHER, THRU BOLT - BR	2		
20	11	20013	NUT, THRU BOLT - BRACKET TO	2		
21	10	37562	SCREW, STARTER MOTOR BRAI	2		
22	13	26393	LOCKWASHER, STARTER MOTO	2		
23		54651	WIRE, STARTER MOTOR TO SUI	1		
24	10	69035	SCREW, GROUND WIRE TO STA	1		
25	87	61053	STARTER SOLENOID	1		
26	10	38601	SCREW, STARTER SOLENOID TI	2		
27	13	26392	LOCKWASHER, STARTER SOLE	2		
28	13	26393	LOCKWASHER, SOLENOID TERK	2		
29	11	68292	NUT, SOLENOID TERMINAL - INE	2		
30	13	26396	LOCKWASHER, SOLENOID TERK	2		
31	11	68219	NUT, SOLENOID TERMINAL (#10	2		
32	84	66053A 1	CABLE, STARTER SOLENOID TO	1		
33	84	66055	WIRING HARNESS (INTERNAL)	1		
34	54	52876	CLAMP, WIRING HARNESS TO B	1		
35	10	69020	SCREW, WIRING HARNESS CLAI	2		
36	13	26393	LOCKWASHER, WIRING HARNE	2		
37	12	30164	WASHER, WIRING HARNESS CL	2		
38	24	28975	SPRING, GARTER - INTERNAL W	1		
39	10	20776	SCREW, WIRING HARNESS LEAI	1		
40	12	26392	LOCKWASHER, WIRING HARNE	1		