



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	6047A 2	GEAR HOUSING ASSEMBLY, CO	1	
-	1623	6052A 3	GEAR HOUSING ASSEMBLY, CO	1	
1	1623	6047A 4	GEAR HOUSING ASSEMBLY (M	1	
1	1623	6052A 4	GEAR HOUSING ASSEMBLY (M	1	
2	23	56513	SLEEVE, LUBRICATION	1	
3	17	46912	PIN, GEAR HOUSING	2	
4	16	57921	STUD, GEAR HOUSING TO D	1	
5	16	57920	STUD, GEAR HOUSING TO D	2	
6	16	56297	STUD, WATER PUMP BASE A	1	
7	16	30667	STUD, WATER PUMP BASE A	2	
8	31	32898	BEARING, ROLLER - DRIVE	1	
9	45	59117A 1	DRIVE SHAFT ASSEMBLY (MEF	1	
9	45	59116A 1	DRIVE SHAFT ASSEMBLY (MEF	1	
10	24	34576	SPRING, COMPRESSION - DF	1	
11	17	30545	PIN, COMPRESSION SPRING	1	
12	43	56518	GEAR, PINION - DRIVE SHAFT	1	
13	11	35921	NUT, PINION GEAR TO DRIVE	1	
14	15	57007A 1	SHIM, TAPERED ROLLER BEAR	1	
15	31	33138A 1	TAPERED ROLLER BEARING A	1	
16	27	33146	GASKET, WATER PUMP BASE	1	4
17	25	33145	"O" RING, WATER PUMP BASE	1	4
18	46	58618A 1	WATER PUMP BASE ASSEMBL	1	
18	46	73802A 1	WATER PUMP BASE ASSEMBL	1	
19	26	31489	OIL SEAL, WATER PUMP BAS	1	
20	26	55682	OIL SEAL, WATER PUMP BAS	1	
21	17	35973	DOWEL PIN, WATER PUMP E	2	
22	27	32433	GASKET, LOWER - WATER PUI	1	4
23		32435	PLATE, FACE - WATER PUMP E	1	
24	27	32434	GASKET, UPPER - FACE PLATE	1	4
25	46	64141A 1	WATER PUMP BODY ASSEMBL	1	
26		48752	INSERT, WATER PUMP BOD	1	
28	26	38970	SEAL, RUBBER - WATER INLI	1	4
29	47	65960	IMPELLER, WATER PUMP	1	
30	28	56654	KEY, IMPELLER DRIVE	1	
31	10	30720	SCREW, WATER PUMP BODY	1	
32	13	26992	LOCKWASHER, WATER PUMP	1	
33	12	29245	WASHER, WATER PUMP BOD	3	
34	11	69069	NUT, WATER PUMP BODY FAS	2	
35	12	36001	WASHER, WATER PUMP BOD	1	
36	11	45592	NUT, WATER PUMP BODY FAS	1	
37	25	20271	RING, RUBBER, CENTRIFUGAL	1	4