



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	1623	1891A 4	GEAR HOUSING ASSEMBLY, CO	1		
1	1623	1891A 1	GEAR HOUSING ASSEMBLY	1		
2	16	30661	STUD, GEAR HOUSING TO D	1		
3	16	29078	STUD, GEAR HOUSING TO D	2		
4	16	30669	STUD, WATER PUMP BASE A	1		
5	16	30667	STUD, WATER PUMP BASE A	2		
6	31	29982	BEARING, ROLLER-DRIVE SH	1		
7	45	30565	DRIVE SHAFT (STANDARD)	1		
8	43	31419	GEAR, PINION-DRIVE SHAFT	1		
9	11	30932	NUT, PINION GEAR TO DRIVE	1		
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR		
11	30	20464	BEARING, BALL-DRIVE SHAFT	1		
12	53	30726	RING, RETAINING-BALL BEAF	1		
10	15	30278A 1	SHIM, WATER PUMP BASE TO	AR		
13	25	30224	"O" RING, WATER PUMP BASE	1		
14	46	31277A 1	WATER PUMP BASE ASSEMBLY	1		
15	26	31489	OIL SEAL, WATER PUMP BAS	1		
16	17	29596	DOWEL PIN, WATER PUMP E	2		
17	27	31285	GASKET, LOWER-WATER PUM	1		
18		31287	PLATE, FACE -WATER PUMP B.	1		
19	27	31286	GASKET, UPPER-FACE PLATE	1		
20	46	31273A 1	WATER PUMP BODY ASSEMBL	1		
21		30915	INSERT, WATER PUMP BOD	1		
22	26	31507	OIL SEAL, WATER PUMP BOD	1		
23	47	30221	IMPELLER, WATER PUMP	1		
24	17	29967	PIN, IMPELLER DRIVE	1		
25	10	30720	SCREW, WATER PUMP BODY	1		
26	13	26992	LOCKWASHER, WATER PUMP	3		
27	11	29598	NUT, WATER PUMP BODY FAS	2		
28	13	26993	LOCKWASHER, WATER PUMP	1		
29	11	28770	NUT, WATER PUMP BODY FAS	1		
30	25	30271	RING, RUBBER-CENTRIFUGAL	1		
31	26	29677	SEAL, RUBBER-WATER PUMP	1		
32	23	29804	SLEEVE, GUIDE-WATER INLET	1		
33	25	30613	"O" RING, UPPER-DRIVE SHAF	1		
34	26	31282	SEAL, WATER PUMP BODY TO	1		
35	32	31272	TUBE, WATER INTAKE-GEAR F	1		
36	26	29971	SEAL, GEAR HOUSING TO WA	1		
37		25136	SHAFT, SHIFT-LOWER	1		
38	18	20233	SLIP, RETAINING-SHIFT SHAFT	1		
39	25	25429	"O" RING, SHIFT SHAFT PUSH	1		