



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1128	1890A 1	END CAP ASSEMBLY, UPPER	1		
2	26	29476	OIL SEAL	1		
3	25	31305	"O" RING	1		
4	30	32117	BEARING, BALL	1		
5	15	31283A 1	SHIM, END CAP TO CRANKCASE	AR		
6	10	30225	SCREW, END CAP MOUNTING	4		
7	836	1852A 1	CYLINDER BLOCK AND CRANKC	1		
8	23	26348	BUSHING, CRANKCASE-COWL	2		
9	22	30139	PLUG, PIPE-WATER PRESSUR	1		
10	16	21831	STUD, CARBURETOR MOUNTI	6		
11	16	26133	STUD, CRANKCASE TO DRIVE	2		
12	17	20033	PIN, DOWEL-CRANKCASE TO C	2		
13	17	20032	PIN, DOWEL-CYLINDER BLOCK	3		
14	16	26134	STUD, CYLINDER BLOCK TO D	2		
15	16	26135	STUD, CYLINDER BLOCK TO D	4		
16	10	29877	SCREW, CRANKCASE TO CYLIND	3		
16	10	26132	SCREW, CRANKCASE TO CYLIND	2		
17	10	21574	SCREW, CRANKCASE TO CYLIND	1		
17	10	32293	SCREW, CRANKCASE TO CYLIND	1		
17	10	22040	SCREW, CRANKCASE TO CYLIND	19		
18	11	29250	NUT, CRANKCASE FASTENING S	26		
19		26551	BRACKET, CLAMP EXTENSION	1		
20	10	33853	SCREW, MAIN BEARING LOCKIN	3		
21	10	20359	SCREW, CENTER MAIN BEARING	2		
22	14	20091	TAB WASHER, BEARING LOCKINI	5		
23	1126	1751A 1	END CAP ASSEMBLY, LOWER	1		
24	21	28481A 1	CHECK VALVE ASSEMBLY, ENI	1		
25	26	29476	OIL SEAL UPPER	1		
26	26	29478	OIL SEAL LOWER	1		
27	25	20081	"O" RING	1		
28	30	20080	BEARING BALL	1		
29	15	20085A 1	SHIM, END CAP TO CRANKCASE	AR		
30	10	30225	SCREW, END CAP MOUNTING	3		
31	27	31302	GASKET, CYLINDER BLOCK TO M	1		
32		30011	PLATE EXHAUST MANIFOLD	1		
33	27	31301	GASKET, MANIFOLD PLATE TO C	1		
34		31303	COVER, EXHAUST MANIFOLD	1		
35	10	28668	SCREW, MANIFOLD COVER MOL	23		
36	54	26519	CLAMP, SPARK PLUG LEADS TO	3		
37		30109	GROUND STRAP ASSEMBLY, CY	1		
38	22	22850	TUBE, BALANCE MAIN BEARING	2		