



| Parts List | | | | | | |
|------------|-------|-------|-----------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 11 | 22339 | NUT, FLYWHEEL | 1,1 | | |
| 2 | 12 | 68229 | WASHER, FLYWHEEL NUT | 1,1 | | |
| 3 | 28 | 45554 | KEY,FLYWHEEL DRIVE | 1,1 | | |
| 4 | 213 | 1683A | FLYWHEEL ASSEMBLY, COMPLE | 1, | | |
| 4 | 225 | 2494A | FLYWHEEL ASSEMBLY, COMPLE | ,1 | | |
| 4 | 225 | 2494A | FLYWHEEL ASSEMBLY, COMPLE | ,1 | | |
| 5 | 23 | 32157 | SPACER LOWER-FLEXIBLE PL/ | ,1 | | |
| 6 | 23 | 32174 | SPACER, UPPER-FLEXIBLE PL/ | ,1 | | |
| 7 | 50 | 30745 | RATCHET, FLYWHEEL | 1,1 | | |
| 8 | 10 | 29238 | SCREW, RATCHET TO FLYWHI | 1, | | |
| 8 | 10 | 32156 | SCREW,SPACERS AND RATCHE | ,3 | | |
| 9 | 11 | 20184 | NUT,SPACER AND RATCHET F | ,3 | | |
| 10 | 10 | 32156 | SCREW, FLEXIBEL PLATE TO F | ,8 | | |
| 11 | 10 | 32417 | SCREW, PLATE AND HUB TO F | ,8 | | |
| 12 | | 29788 | FLANGE,FLYWHEEL PULLEY | 1,1 | | |
| 13 | | 30306 | PULLEY, FLYWHEEL | 1,1 | | |
| 14 | 17 | 26618 | PIN, DOWEL-PULLEY TO FLYW | 1,1 | | |
| 15 | | 29787 | HUB, FLYWHEEL PULLEY | 1,1 | | |
| 16 | 398 | 2035 | STATOR,ALTERNATOR SEE NO | 1,1 | | |
| 16 | 398 | 2188 | STATOR, ALTERNATOR SEE NO | ,1 | | |
| 17 | | 30050 | TERMINAL, STATOR LEAD WIF | 2,2 | | |
| 18 | 10 | 29283 | SCREW, STATOR TO UPPER EN | 4,4 | | |
| 18 | 10 | 57021 | SCREW,STATOR TO UPPER ENC | ,4 | | |
| 19 | 54 | 24836 | CLIP, STATOR LEAD TO EXHAU | 1,1 | | |
| 20 | | 22789 | "D" WASHER, CLIP FASTENING | ,1 | | |
| 21 | 10 | 69014 | SCREW, STATOR LEAD CLIP FAS | 1,1 | | |
| 22 | 54 | 22783 | "S" CLIP,STATOR LEADS TO BO | 4,4 | | |