



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
	1623	2022A 7	GEAR HOUSING ASSEMBLY, CO	1		
1	1623	2022A 1	GEAR HOUSING ASSEMBLY (SI	1		
50		30147	CAM, SHIFT	1		
51		30625	FOLLOWER, CAM	1		
52		30624	SLIDE, CROSS PIN	1		
53	24	30622	SPRING, COMPRESSION-CAM F	1		
54	15	30923A 1	SHIM, BEARING OUTER RACE	1		
55	43	31886	FORWARD GEAR ASSEMBLY	AR		
56	31	30895	BEARING, ROLLER-FORWAR	1		
57	31	30894A 1	TAPERED ROLLER BEARING	1		
58	31	31092	CUP, TAPERED ROLLER BE	1		
59	52	34239	RATCHET, SLIDING CLUTCH	1		
60	17	30632	PIN, CROSS-RATCHET TO PRO	1		
61	24	30893	SPRING, RETAINING-CROSS PI	1		
62	44	32164	SHAFT, PROPELLER	1		
63	43	31887	REVERSE GEAR ASSEMBLY	1		
64	30	31265	BEARING, BALL-REVERSE GE	1		
65	12	30633	WASHER, THRUST-BEARING	1		
66	15	29955A 1	SHIM, THRUST WASHER TO G	AR		
67	25	29976	"O" RING, BEARING CARRIER	1		
68		31284A 1	BEARING CARRIER ASSEMBLY	1		
69	31	30956	BEARING, ROLLER-BEARING	1		
70	26	30550	OIL SEAL, BEARING CARRIER	2		
71	28	30281	KEY, LOCATING- BEARING CAF	1		
72	12	29957	WASHER, GEAR HOUSING COV	1		
73		31037	COVER, GEAR HOUSING	1		
74	12	31013	WASHER, THRUST-BEARING CA	1		
75		30581A 1	THRUST HUB AND WASHER AS:	1		
76	12	29590	WASHER, CUPPED-THRUST H	1		
77	12	31211	WASHER, SPLINED-PROPELLER	1		
78	14	31210	TAB WASHER, PROPELLER NUT	1		
79	11	29594	NUT, PROPELLER	1		
80		31640	TRIM TAB, GEAR HOUSING	1		
81	10	32470	SCREW, TRIM TAB TO GEAR HO	1		
82	10	30206	SCREW, GEAR HOUSING TO DR	1		