



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		30472	WIRING HARNESS,INTERNAL	1	
1		32667	WIRING HARNESS, INTERNAL	.1	
2		30050	TERMINAL, INTERNAL WIRING	AR,AR	
3		26079	PLATE, WIRING HARNESS TO BI	1,1	
4	10	26128	SCREW, WIRING HARNESS PLA	4,4	
5	24	28975	SPRING, GARTER-INTERNAL WI	1,1	
6	54	22783	"S" CLIP, RECTIFIER WIRING HA	3,3	
7		29691	RECTIFIER ASSEMBLY	1	
8	13	26993	LOCKWASHER, RECTIFIER MO	1	
9	11	21929	NUT, RECTIFIER MOUNTING S	1	
10	32	28373	SLEEVE,RUBBER-RECTIFIER HA	2	
11	32	28052	SLEEVE, RUBBER-RECTIFIER HA	1	
12	10	29852	SCREW, HARNESS AND STATOF	3	
13	11	29488	NUT, HARNESS AND STATOR LE	3	
7A		32177A 1	RECTIFIER ASSEMBLY	.1	
8A	10	26065	SCREW, RECTIFIER TO MOUNTI	.1	
9A	11	29250	NUT, RECTIFIER MOUNTING SCI	.1	
10A	10	29852	SCREW, HARNESS TERMINAL LI	.1	
11A	13	26996	LOCKWASHER, RECTIFIER STAT	.2	
12A	11	20645	NUT, FASTENING-RECTIFIER ST	.2	
14	50	30842	STARTER MOTOR ASSEMBLY (D	1	
14	50	31976	STARTER MOTOR ASSEMBLY (D	.1	
15		31057	PLATE, SPACER-STARTER MOTI	1	
15		32084	PLATE, SPACER-STARTER MOTI	.1	
16	10	22698	SCREW, STARTER MOTOR TO C	2,2	
17	13	26993	LOCKWASHER, STARTER MOTO	2,2	
18		29930	BRACKET, SUPPORT-STARTER I	1,1	
19	12	24664	WASHER, THRU BOLT-BRACKET	1	
19	13	24669	LOCKWASHER, THRU BOLT-BRA	2,2,2	
20	11	20890	NUT, THRU BOLT-BRACKET TO	2,2	
21		25596	CABLE,WIRE-STARTER MOTOR	1	
21		32107	CABLE, WIRE-STARTER MOTOR	.1	
22	54	20534	CLAMP, LOWER CABLE-STARTEI	1	
23	10	29197	SCREW, WIRING HARNESS GRC	1,1	
24		31478	STARTER SOLENOID	1	
24		32082	STARTER SOLENOID	.1	
25		32278A 1	GROUND STRAP ASSEMBLY, ST	.1	
26	13	26993	LOCKWASHER, SOLENOID TERM	2,2	
27	11	20083	NUT, SOLENOID TERMINAL (5/1)	2,2	
28	13	26996	LOCKWASHER, SOLENOID TERM	2,2	
29	11	20645	NUT, SOLENOID TERMINAL (#10)	2,2	