



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	2986A 8	SWITCH BOX ASSEMBLY, COMPI	1		
2	11	45076	NUT, SWITCH BOX TERMINAL	7		
3	10	21625	SCREW, SWITCH BOX TO FRON	4		
4	11	46887	NUT, SWITCH BOX TO FRONT SI	4		
5	332	2910A 3	RECTIFIER ASSEMBLY, COMPLE	1		
6	11	45076	NUT, RECTIFIER TERMINAL	3		
7	10	24963	SCREW, RECTIFIER TO BOTTOM	2		
8	13	22773	LOCKWASHER, RECTIFIER MOU	2		
9		59757	BRACKET, RETAINER - HIGH TE	1		
10	10	22956	SCREW, RETAINER BRACKET TI	1		
11	12	29245	WASHER, RETAINER BRACKET I	1		
12	11	46887	NUT, RETAINER BRACKET SCRE	1		
13	50	58788	STARTER MOTOR ASSEMBLY (F	1	(FOR BREAKDOWN, SEE ACCES	
14	11	20890	NUT, STARTER MOTOR TERMIN	1		
15	13	26392	LOCKWASHER, STARTER MOTO	1		
16	10	20362	SCREW, STARTER MOTOR TO C	1		
16	10	31984	SCREW, STARTER MOTOR TO C	1		
17	13	26393	LOCKWASHER, STARTER MOTO	2		
18		52691	BRACKET, SUPPORT - STARTER	1		
19	13	26392	LOCKWASHER, THRU BOLT - BR	2		
20	11	20013	NUT, THRU BOLT - BRACKET TO	2		
21	10	37562	SCREW, STARTER MOTOR BRAI	2		
22	13	26393	LOCKWASHER, STARTER MOTO	2		
23		25596	WIRE, STARTER MOTOR TO STA	1		
24	10	29197	SCREW, GROUND WIRE TO STA	1		
25		25661	STARTER SOLENOID	1		
26	10	21625	SCREW, STARTER SOLENOID TI	2		
27	13	26392	LOCKWASHER, STARTER SOLEI	2		
28	13	26393	LOCKWASHER, SOLENOID TERK	2		
29	11	20083	NUT, SOLENOID TERMINAL - INE	2		
30	13	26396	LOCKWASHER, SOLENOID TERK	2		
31	11	20645	NUT, SOLENOID TERMINAL (#10	2		
32		52902	CABLE, STARTER SOLENOID TO	1		
33		52771	WIRING HARNESS (INTERNAL)	1		
34	54	52876	CLAMP, WIRING HARNESS TO B	1		
35	10	45862	SCREW, WIRING HARNESS CLAI	2		
36	13	26396	LOCKWASHER, WIRING HARNE	2		
37	12	20128	WASHER, WIRING HARNESS CL	2		
38	24	28975	SPRING, GARTER - INTERNAL W	1		
39	54	26550	CLAMP, WIRING HARNESS TO C	1		
40	10	21205	SCREW, WIRING HARNESS CLAI	1		