



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3919	COWL, BOTTOM	1	UNITED STATES 3865694 AND I	
1	2115	5269	COWL, BOTTOM	1	UNITED STATES 3865695 AND I	
2		52862A 2	DRIP TRAY ASSEMBLY, BOTTOM	1		
3		37940	PAD, SOUND - DRIP TRAY	1		
4	10	48408	SCREW, DRIP TRAY TO BOTTOM	4		
5	32	34395A 1	HOSE, DRIP TRAY TO BOTTOM (1		
6		39616	BOOT, CONTROL CABLES - BOT	1		
7		37637	BOOT, FUEL CONNECTOR - BOT	1		
8		37445	SUPPORT, WIRING HARNESS - E	1		
9	10	31471	SCREW, SUPPORT TO COWL (3	1	UNITED STATES 3865694 AND I	
9	10	69029	SCREW, SUPPORT TO COWL (1	2		
10	11	35045	NUT, WIRING HARNESS SUPPO	2		
11	32	34395A 1	HOSE, TELL TALE - EXH. COVER	1		
12		52889	NOZZLE, TELL TALE HOSE TO B	1		
13	10	48408	SCREW, TELL TALE NOZZLE TO	1		
14	54	48123	CLAMP, TELL TALE HOSE TO CO	2		
15	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
16		60304A15	SHIFT SHAFT ASSEMBLY, UPPEF	1		
16		60304A16	SHIFT SHAFT ASSEMBLY, UPPEF	1		
17		55692	COUPLING, SHIFT SHAFT	1		
18	23	26600	BUSHING, SHIFT SHAFT	1		
19		48047A 1	LINK ROD ASSEMBLY	1		
20	12	35462	WASHER, LINK ROD (SHIFT LEVI	2		
21	11	35045	NUT, LINK ROD	2		
22	13	29720	WASHER, WAVE - LINK ROD	1		
23	24	20099	SPRING, LINK ROD TO GUIDE BL	1		
24		37896	GUIDE BLOCK, LINK ROD	1		
25		52732	BRACKET, ANCHOR - CONTROL	1		
26		39519	CAP, BARREL RETAINER - ANCH	1		
27		39618	LEVER, NYLON - SHIFT CABLE LI	1		
28	17	47175	PIN, LOCKING LEVER AND COVE	3		
29		39667	COVER, NYLON - SHIFT CABLE	1		
30		65799	LINK, LOCKING LEVER TO COVE	1		
31	10	24234	SCREW, ANCHOR BRACKET TO	3		
32		52100	WEAR PLATE, LINK ROD	1		
33		38279	LATCH, CONTROL CABLE FASTE	1		