



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	6047A 2	GEAR HOUSING ASSEMBLY, CO	1		
-	1623	6052A 3	GEAR HOUSING ASSEMBLY, CO	1		
1	1623	6047A 4	GEAR HOUSING ASSEMBLY (M	1		
1	1623	6052A 4	GEAR HOUSING ASSEMBLY (M	1		
53		54346	CAM, SHIFT	1		
54		30625	FOLLOWER, CAM	1		
55		30624	SLIDE, CROSS PIN	1		
56	24	30622	SPRING, COMPRESSION - CAM	1		
57	15	30923A 1	SHIM, BEARING OUTER RACE	AR		
58	31	30894A 1	TAPERED ROLLER BEARING A	1		
59	31	30895	BEARING, ROLLER - FORWARD	1		
60	43	56517	FORWARD GEAR ASSEMBLY	1		
61	52	34239	RATCHET, SLIDING CLUTCH	1		
62	17	30632	PIN, CROSS - RATCHET TO PR	1		
63	24	30893	SPRING, RETAINING - CROSS	1		
64	44	52542	SHAFT, PROPELLER	1		
65	43	56516	REVERSE GEAR ASSEMBLY	1		
66	12	71143A 1	WASHER, THRUST - BEARING	1		
67	30	31265	BEARING, BALL - REVERSE GE	1		
68	25	29976	"O" RING, BEARING CARRIER	1		4
69		73800A 1	BEARING CARRIER ASSEMBLY	1		
69		52132A 1	BEARING CARRIER ASSEMBLY	1		
70	31	30956	BEARING, ROLLER - BEARIN	1		
71	26	73838	OIL SEAL, BEARING CARRIEF	2		
72	25	32546	"O" RING, BEARING CARRIEF	1		4
73	28	30281	KEY, LOCATING - BEARING CA	1		
74	14	52700	TAB WASHER, GEAR HOUSING	1		
75		52699	COVER, GEAR HOUSING	1		
76		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
77	10	66024	SCREW, TRIM TAB TO GEAR H	1		
78	12	45176	WASHER, GEAR HOUSING TO	2		
79	11	34933	NUT, GEAR HOUSING TO DRIV	2		
80	10	65210	SCREW, GEAR HOUSING TO DR	1		
81		65091	THRUST HUB	1		
82	12	31211	WASHER, SPLINED - PROPELL	1		
83	14	31210	TAB WASHER, PROPELLER NUT	1		
84	11	52707	NUT, PROPELLER	1		