



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	332	4177A 3	HOUSING ASSEMBLY, DISTRIBU	1		
2		32197	STOP, SPARK ADVANCE - DISTR	1		
3	17	27962	PIN, ANCHOR SPRING - DISTRIB	1		
4	24	27944	SPRING, HORSESHOE - DISTRIB	1		
5	12	53540	WASHER, ECONOMIZER COLLA	1		
6		55804A 1	ECONOMIZER COLLAR ASSEMBL	1		
7	17	27961	PIN, ECONOMIZER COLLAR - SP	1		
8	22	25094	FITTING, GREASE - ECONOMIZE	1		
9		27947	SWIVEL, LINKAGE - ECONOMIZE	1		
10		25996A 1	SWIVEL AND LINK ROD ASSEMB	1	UNITED STATES 3865694 AND I	
11	11	64484	NUT, UPPER LINK ROD ADJUSTI	1	UNITED STATES 3865694 AND I	
12		37588	ROD, LINK - UPPER	1	UNITED STATES 3865694 AND I	
12A		67468	ROD, LINK - UPPER	1	UNITED STATES 3865695 AND I	
13		27948	SWIVEL, UPPER LINK ROD TO T	1		
14		48562	LEVER, THROTTLE CONTROL	1		
15	13	39954	WASHER, WAVE - THROTTLE CO	1		
16	12	29245	WASHER< THROTTLE CONTROL	1		
17	11	35888	NUT, UPPER LINK ROD TO THR	1		
18	10	37559	SCREW, THROTTLE LEVER TO E	1		
19	12	29395	WASHER, THROTTLE CONTROL	1		
20	23	45818	BUSHING, THROTTLE CONTROL	1		
21	11	20509	NUT, THROTTLE CONTROL LEV	1		
22		37587	SWIVEL, LOWER - THROTTLE CI	1		
23	11	35888	NUT, THROTTLE CABLE TO LOW	1		
24		48692	COLLAR, THROTTLE ACTUATOR	1		
25	10	61658	SCREW, ADJUSTING - ACTUATO	1		
26	11	64015	NUT, THROTTLE ACTUATOR CO	1		
27		52023	CAP, NYLON - THROTTLE ACTU	1		
28		48671	PLATE, THROTTLE ACTUATOR	1		
29	10	37892	SCREW, THROTTLE ACTUATOR	2		
30	12	30164	WASHER, THROTTLE ACTUATO	2		
31	13	26996	LOCKWASHER, THROTTLE ACTI	2		
32	23	48674	SPACER, THROTTLE ACTUATO	2		
33		54239	CAM, THROTTLE ACTUATOR PL	1		
34	12	46246	WASHER, ADAPTOR - DISTRIBU	1		
35		48666A 1	ADAPTOR ASSEMBLY, DISTRIBL	1	UNITED STATES 3865694 AND I	
35		66165A 2	ADAPTOR ASSEMBLY, DISTRIBL	1	UNITED STATES 3865695 AND I	
36	22	25094	FITTING, GREASE - DISTRIBUTO	1		
37	10	22040	SCREW, DISTRIBUTOR HOUSINI	3		
37	10	20362	SCREW, DISTRIBUTOR HOUSINI	3		
38	12	20084	WASHER, DISTRIBUTOR HOUSI	2		