



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	30	20066	BALL BEARING< DISTRIBUTOR H	1		
2	11	54209	NUT, ROTOR SHAFT TO DISTRIB	1		
3	23	53539	SLEEVE, ROTOR SHAFT	1		
4	332	4177A 3	HOUSING ASSEMBLY, DISTRIBU	1		
5		53417	GROUND STRAP ASSEMBLY, DI	1		
6	10	62568	SCREW, GROUND STRAP ATTACH	1		
7		58807A 1	FLAME ARRESTOR ASSEMBLY, I	1		
8	15	21148A 1	SHIM, ROTOR	1		
9	15	55853	SHIM, ROTOR	AR		
10	23	53538	SPACER, ROTOR SHAFT	1		
11	393	3236	DISC, ROTOR	1		
12	30	26379	BALL BEARING, DISTRIBUTOR H	1		
13	53	26406	RING, RETAINING - BALL BEARIN	1		
14	393	4371	ROTOR, DISTRIBUTOR	1		
15	54	60768	CLAMP, DISTRIBUTOR CAP TO C	1		
16	10	65774	SCREW, DISTRIBUTOR CAP CLAM	1		
17	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1		
18	393	3294A 1	CABLE ASSEMBLY, CAP TO COIL	1	UNITED STATES 3865694 AND I	
18	84	66056A 1	CABLE ASSEMBLY, CAP TO COIL	1	UNITED STATES 3865695 AND I	
19	25	26547	GROMMET, CABLE (5/16")	1		
19	25	56474	GROMMET, CABLE (7/8")	1		
20	332	2854	BOOT, CABLE TO COIL	1		
21		60096	SLEEVE, CABLE	1		
22	32	46398	SLEEVE, (LEADS 1, 2, 3, 4) - 3/4"	1		
23	27	55896	GASKET, DISTRIBUTOR CAP TO	1		2,3,4
24	393	3726A10	DISTRIBUTOR CAP ASSEMBLY	1		
25	393	1293A 1	BRUSH AND SPRING ASSEMBLY	1		
26		58807A 1	FLAME ARRESTOR ASSEMBLY	1		
27		63319	RETAINER, LEADS	4		
28	10	46378	SCREW, LEAD RETAINER (1")	2		
29	11	20013	NUT, RETAINER SCREW	2		
30	33	59599	SPARK PLUG (CHAMP L-77V)	4		
31	84	63212A 2	SPARK PLUG LEAD ASSEMBLY ‡	4	ORDER A-36549A1 KIT FOR REF	
32		47604A 1	PROTECTOR, SPARK PLUG LEAD	4		
33	32	26527	SLEEVE, SPARK PLUG LEAD (LE	2		
34		60096	SLEEVE, SPARK PLUG LEAD TO	4		