



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		64165A	1 PLATE ASSEMBLY, EXHAUST EX	1	UNITED STATES 3865694 AND I	
1		66096A	1 PLATE ASSEMBLY, EXHAUST EX	1	UNITED STATES 3865695 AND I	
2	23	27132	BUSHING, NYLON - EXHAUST EX	1	UNITED STATES 3865695 AND I	
3	17	23784	DOWEL PIN, EXHAUST EXTENSI	2		
4		37918	SEAL, EXHAUST EXTENSION PL	1		
5		38032	STRIP, RETAINING - EXHAUST E	1		
6	10	37571	SCREW, SEAL AND RETAINING	5		
7	27	66101	GASKET, POWERHEAD TO EXHA	1		2
7	27	69238	GASKET, POWERHEAD TO EXHA	1		3,4
8	10	62644	SCREW, ADAPTOR PLATE ATTA	1	UNITED STATES 3865694 AND I	
9	13	26993	LOCKWASHER, ADAPTOR PLATE	1	UNITED STATES 3865694 AND I	
8	10	66023	SCREW, ADAPTOR PLATE TO HO	2	UNITED STATES 3865695 AND I	
10	10	66023	SCREW, HOUSING PLATE TO DR	7	UNITED STATES 3865695 AND I	
11	11	69254	NUT, CRANKCASE STUDS TO EX	2		
12	12	25970	WASHER, CRANKCASE STUDS T	2		
13	27	60945	GASKET, PLATE TO DRIVE SHAF	1	UNITED STATES 3865694 AND I	2
13	27	66102	GASKET, PLATE TO DRIVE SHAF	1	UNITED STATES 3865695 AND I	3,4
14	12	34437	WASHER, DRIVE SHAFT HOUSIN	7	UNITED STATES 3865694 AND I	
15	11	64809	NUT, DRIVE SHAFT HOUSING S1	7	UNITED STATES 3865694 AND I	
16	26	60898	SEAL, DRIVE SHAFT HOUSING P	1		
17		64103A	3 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 3865694 AND I	
17		66100A	2 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 3865695 AND I	
18	26	38970	SEAL, RUBBER - WATER INLET	1		2,3,4
19	17	23784	DOWEL PIN, DRIVE SHAFT HOU	2		
20	27	69860	GASKET, DRIVE SHAFT HOUSIN	1		2,3,4
21		65032	EXHAUST TUBE	1		
22	10	61010	SCREW, EXHAUST TUBE TO DR	4		
23	13	26992	LOCKWASHER, EXHAUST PLATE	4		
24	12	25970	WASHER, POWERHEAD STUDS	8		
25	11	34932	NUT, POWERHEAD STUDS	6		